


## VIP SET-UP KEYPAD

Ref. Nr. 10.0021

- ✓ The SET-UP KEYPAD is designed to initialize VIP boards. It must be linked with the RS232C input connector to load the system commands into the VIP board memory.
- ✓ To initialize the VIP boards, the video out of the board is connected to the video in of the monitor. The keypad is connected to the service port of the VIP board.

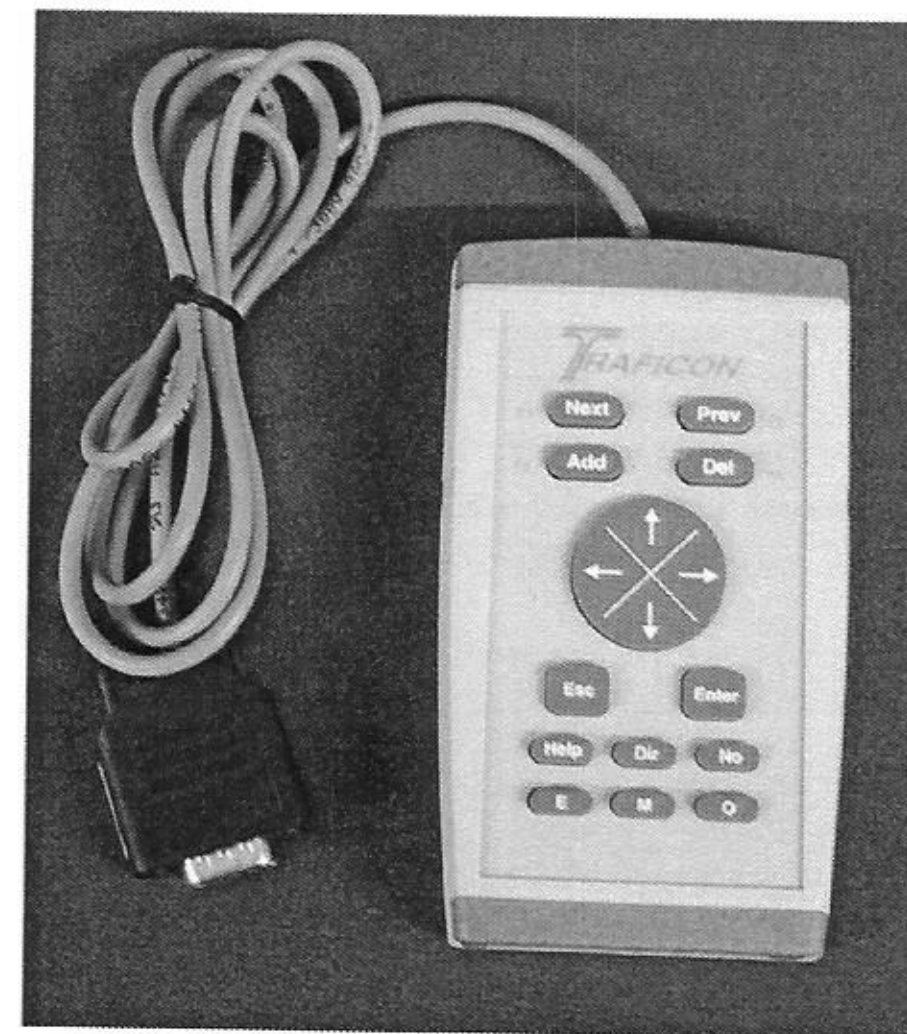

### Specifications

<b>Dimensions</b>	<ul style="list-style-type: none"><li>• Width 75 mm</li><li>• Depth 26 mm</li><li>• Height 130 mm</li></ul>
<b>Weight</b>	<ul style="list-style-type: none"><li>• 0.37 Kg</li></ul>
<b>Data format</b>	<ul style="list-style-type: none"><li>• Serial data format RS232C</li></ul> Auto repeat 20 Hz after 0.5s delay
<b>Power Supply</b>	<ul style="list-style-type: none"><li>• Takes 3.3 - 5VDC from serial connector - 5mA (max)</li></ul>