

**Contents**

1.0 WARNINGS, CAUTIONS, AND NOTES..... 1

2.0 OPERATION..... 2

    2.1 Front Panel Features and Components ..... 2

        2.1.1 AC and DC Connection Terminals ..... 3

        2.1.2 LED Status Indicating Lights ..... 3

        2.1.3 Battery Type Configuration Switch ..... 3

        2.1.4 Temperature Sensor Cable ..... 4

        2.1.5 Remote Voltage Sensor Input Terminals..... 4

        2.1.6 Voltage Monitor Output Terminals..... 5

        2.1.7 Float Voltage Adjustment Potentiometer ..... 5

        2.1.8 Current Limit Adjustment Potentiometer..... 5

        2.1.9 AC Input Fuses ..... 5

        2.1.10 DC Output Circuit Breaker..... 5

    2.2 Set Up Procedures..... 6

        2.2.1 Setting the Battery Cell Switches ..... 6

        2.2.2 Adjusting the Float Voltage..... 8

        2.2.3 Setting the Temp Comp Switch ..... 9

        2.2.4 Setting the Current Limit..... 9

        2.2.5 Remote Voltage Sensing..... 10

        2.2.6 Using the Voltage Monitor ..... 10

3.0 STANDARD FEATURES ..... 11

4.0 SPECIFICATIONS ..... 12

**List of Tables**

Table 1. Warnings, Cautions, and Notes ..... 1

Table 2. AC Connection Terminals..... 3

Table 3. LED Status Lights ..... 3

Table 4. Temperature Compensation Rate ..... 4

Table 5. AC Input Fuses ..... 5

Table 6. Number of Cells Guide ..... 6

Table 7. General Specifications..... 12

Table 8. Model Specifications..... 12