

Figure 2. Cell Switch Settings for Battery Chargers (Except 30ETC)

NOTE

When setting the cell switches for the 30ETC battery charger:

- For Lead Acid batteries, use the cell switches numbered 11 thru 18.
- For NiCad batteries, use cell switches numbered 19 thru 26.

4. For 30ETC battery chargers, set the switch that corresponds to the Number of Cells on the battery charger to the left (on position). Set the other Number of Cell switches to the right (off position).

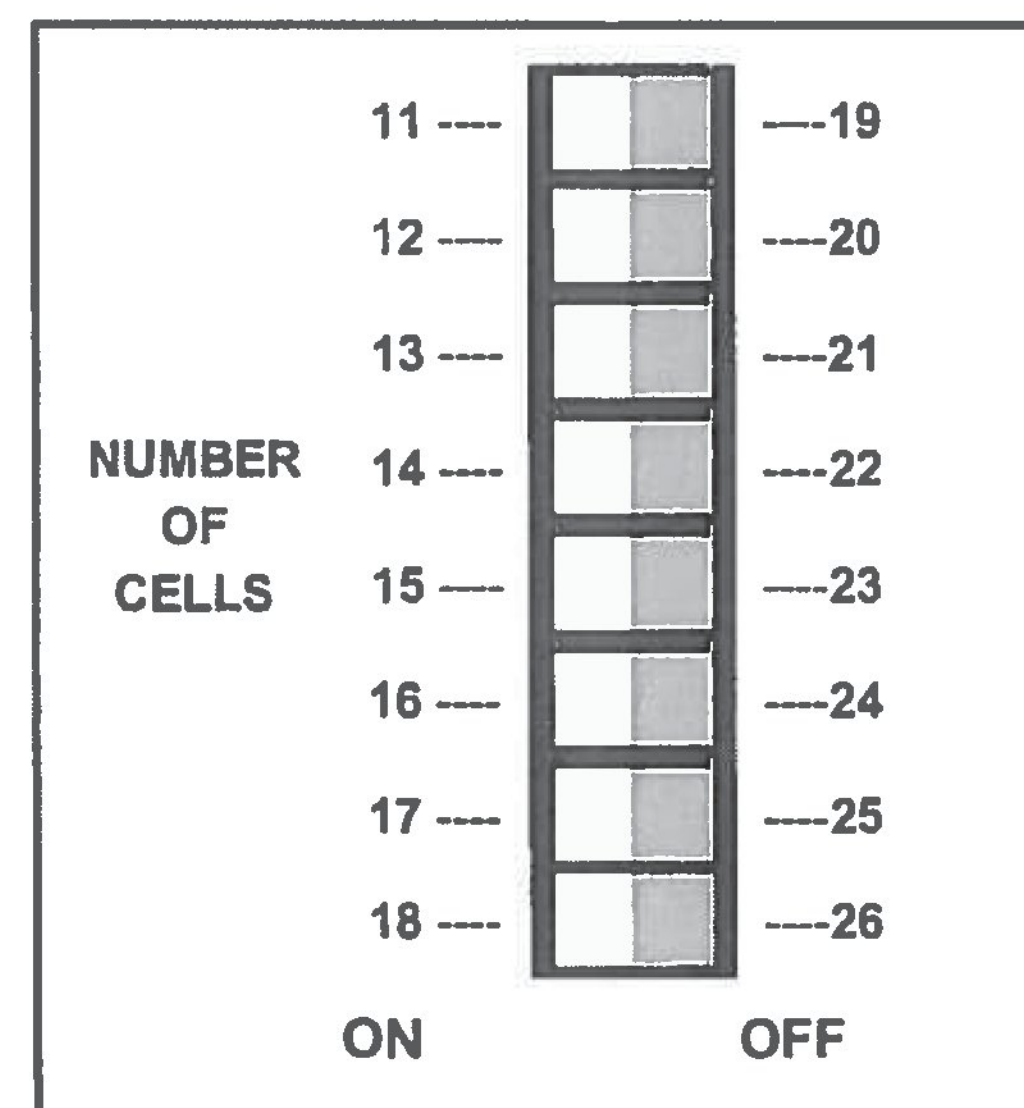


Figure 3. Cell Switch Settings for 30ETC Battery Chargers