

CONTROLLER

MONITOR

NAZTEC, INC.
SUGAR LAND, TEXAS, USA
SS#30501-4000F R.V.R.

PORT 1 (C) CABLE 'B1' TERMINALS		PREMPTS	
PAR 1	PAR 2	INPUTS	OUTPUTS
PIN 1 (+) PIN 9 (-)	PIN 3 (+) PIN 11 (-)	1	12
2	13	3	14
4	15	5	16
6	17	7	18
8	19	9	20
10	21	11	22
12	23	13	24
14	25	15	26
16	27	17	28
18	29	19	30
20	31	21	32
22	33	23	34
24	35	25	36
26	37	27	38
28	39	29	40
30	41	31	42
32	43	33	44
34	45	35	46
36	47	37	48
38	49	39	50
40	51	41	52
42	53	43	54
44	55	45	56
46	57	47	58
48	59	49	60

NAZTEC

BUZ INTERFACE UNIT

TX STATUS

PWR

TX STATUS

PWR

BUZ INTERFACE UNIT

TX STATUS

PWR

PORT 2 (C) CABLE 'B1' TERMINALS		PREMPTS		TRC. AUX	
PAR 1	PAR 2	INPUTS	OUTPUTS	IN	OUT
PIN 1 (+) PIN 9 (-)	PIN 3 (+) PIN 11 (-)	1	12	1	2
2	13	3	14	3	4
4	15	5	16	5	6
6	17	7	18	7	8
8	19	9	20	9	10
10	21	11	22	11	12
12	23	13	24	13	14
14	25	15	26	15	16
16	27	17	28	17	18
18	29	19	30	19	20
20	31	21	32	21	22
22	33	23	34	23	24
24	35	25	36	25	26
26	37	27	38	27	28
28	39	29	40	29	30
30	41	31	42	31	32
32	43	33	44	33	34
34	45	35	46	35	36
36	47	37	48	37	38
38	49	39	50	39	40
40	51	41	52	41	42
42	53	43	54	43	44
44	55	45	56	45	46
46	57	47	58	47	48
48	59	49	60	49	50

LS1 LS2 LS3 LS4 LS5

MODEL 855-87-10

RED IN OUT

YEL IN OUT

GRN IN OUT

LS10 LS11 LS12

FLASHER

204

KLS

FLASHER PROGRAM

LS1 LS2 LS3 LS4 LS5

LS10 LS11 LS12

501 502 503 504 505 506 507 508 509 510 511 512

513 514 515 516 517 518 519 520 521 522 523 524

525 526 527 528 529 530 531 532 533 534 535 536

G Y R G F Y R G Y R

DT1

DT2

DT3

DT4

DT5

DT6

DT7

DT8

DT9

DT10

DT11

DT12

DT13

DT14

DT15

DT16

DT17

DT18

DT19

DT20

DT21

DT22

DT23

DT24

DT25

DT26

DT27

DT28

DT29

DT30

DT31

DT32

DT33

DT34

DT35

DT36

DT37

DT38

DT39

DT40

DT41

DT42

DT43

DT44

DT45

DT46

DT47

DT48

DT49

DT50

DT51

DT52

DT53

DT54

DT55

DT56

DT57

DT58

DT59

DT60

DT61

DT62

DT63

DT64

DT65

DT66

DT67

DT68

DT69

DT70

DT71

DT72

DT73

DT74

DT75

DT76

DT77

DT78

DT79

DT80

DT81

DT82

DT83

DT84

DT85

DT86

DT87

DT88

DT89

DT90

DT91

DT92

DT93

DT94

DT95

DT96

DT97

DT98

DT99

DT100

FLASHER

204

FLASHER PROGRAM

LS1 LS2 LS3 LS4 LS5

LS10 LS11 LS12

501 502 503 504 505 506 507 508 509 510 511 512

513 514 515 516 517 518 519 520 521 522 523 524

525 526 527 528 529 530 531 532 533 534 535 536

G Y R G F Y R G Y R