



ASC-80

CONTROLLER

CONFLICT MONITOR

LS1

LS2

LS3

LS4

LS5

LS6

LS8

MODEL 200

MODEL 204

MODE

CL 2

LS9

LS10

LS11

LS13

LS14

LS16

A

AC+ CTRL

START

DELAY

AC+

AC- CTRL

FL

REL

AC+

FL

CONT

CRUI

DOOR

SEV

GB3

CHASSIS

GN

133

134

135

136

137

138

139

140

141

142

143

144

217

218

219

220

101

102

103

104

105

106

107

108

109

110

111

112

113

114

115

116

117

118

119

120

121

122

123

124

125

126

127

128

129

130

131

132