



**BEGIN /END PROJECT
CONSTRUCTION APPROACH SIGNING**

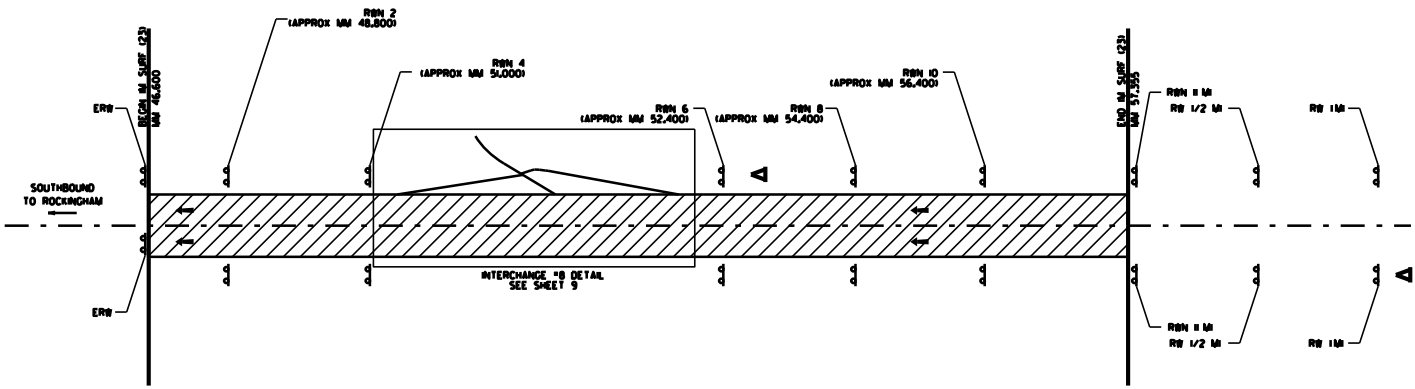

- LEGEND**
- RBN = ROAD WORK NEXT (X MILES)
 - ERW = END ROAD WORK
 - RB 1 MI = ROAD WORK IN 1 MILE
 - RB 1/2 MI = ROAD WORK IN 1/2 MILE
 - ▲ = PORTABLE CHANGEABLE MESSAGE SIGN
 -  = WORK AREA
 - ← = DIRECTION OF TRAFFIC FLOW

NOT TO SCALE

**CONSTRUCTION
APPROACH
SIGNING
SHEET**

PROJECT NAME: **SPRINGFIELD - WINDSOR**
PROJECT NUMBER: **IM SURF (23)**

FILE NAME: \\QA08\...QA08.dgn PLOT DATE: 23-MAY-2002 09:00
PROJECT LEADER: MUNT DRAWN BY: MUNT
DESIGNED BY: MUNT CHECKED BY: PAVI MONT
PARR FILE NAME: QA08.00J SHEET 8 OF 8