


# CONSTRUCTION APPROACH SIGNING SHEET

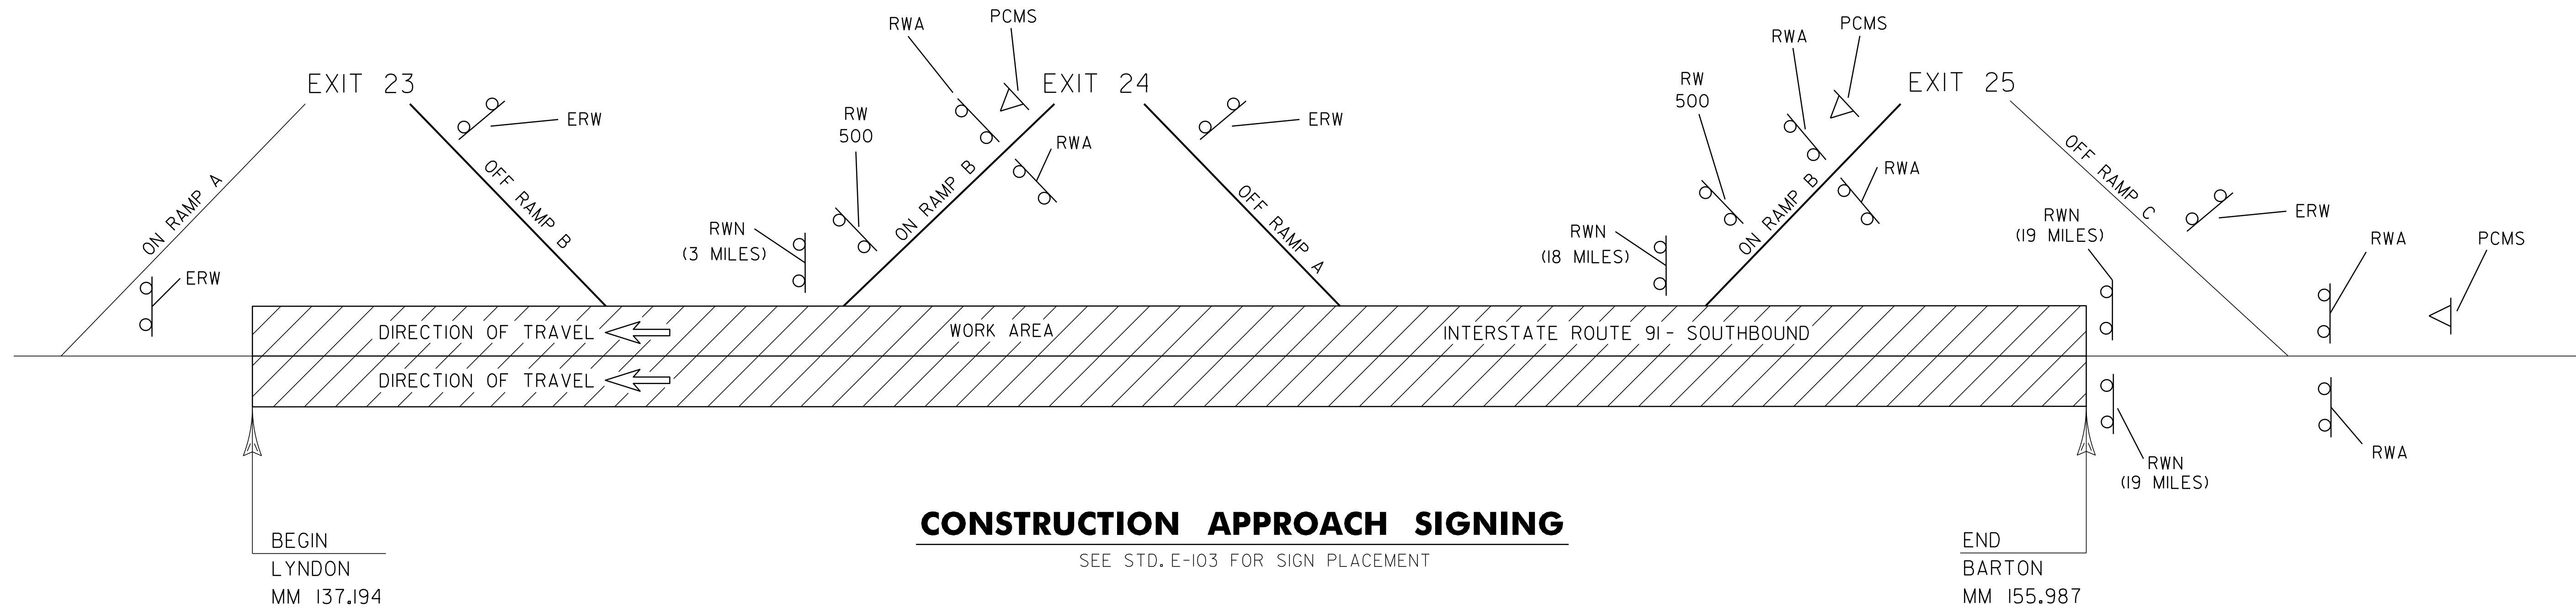

## CONSTRUCTION APPROACH SIGNING

SEE STD. E-103 FOR SIGN PLACEMENT

LIST OF CONSTRUCTION SIGNS

LOCATION	RWA	RW500	ERW	RWN	PCMS
I-91 SOUTHBOUND					
BEGIN PROJECT			1		
EXIT 23 INTERCHANGE			1		
EXIT 24 INTERCHANGE	2	1	1	1	1
EXIT 25 INTERCHANGE	2	1	1	1	1
END PROJECT	2			2	1
TOTALS	6	2	4	4	3

LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK 500 FEET
- RWN = ROAD WORK NEXT ( ) MILES
- SRWA = SIDE ROAD WORK AHEAD
- ERW = END ROAD WORK
- SRW500 = SIDE ROAD WORK 500 FEET
- ◁ = PORTABLE CHANGEABLE MESSAGE SIGN

### CONSTRUCTION APPROACH SIGNING SHEET

PROJECT NAME: LYNDON-BARTON  
PROJECT NUMBER: IM SURF (34)

FILE NAME: pl2a286.dgn  
PROJECT LEADER: M. FOWLER  
DESIGNED BY: L. BULLOCK  
I2a286cas.i

PLOT DATE: 15-APR-2014 14:08  
DRAWN BY: L. BULLOCK  
CHECKED BY: PAVT MGMT  
SHEET 18 OF 21

NOT TO SCALE