


LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK 500 FT
- RWN = ROAD WORK NEXT 5/4 MILES
- ERW = END ROAD WORK
- RPA = RAMP PAVING AHEAD

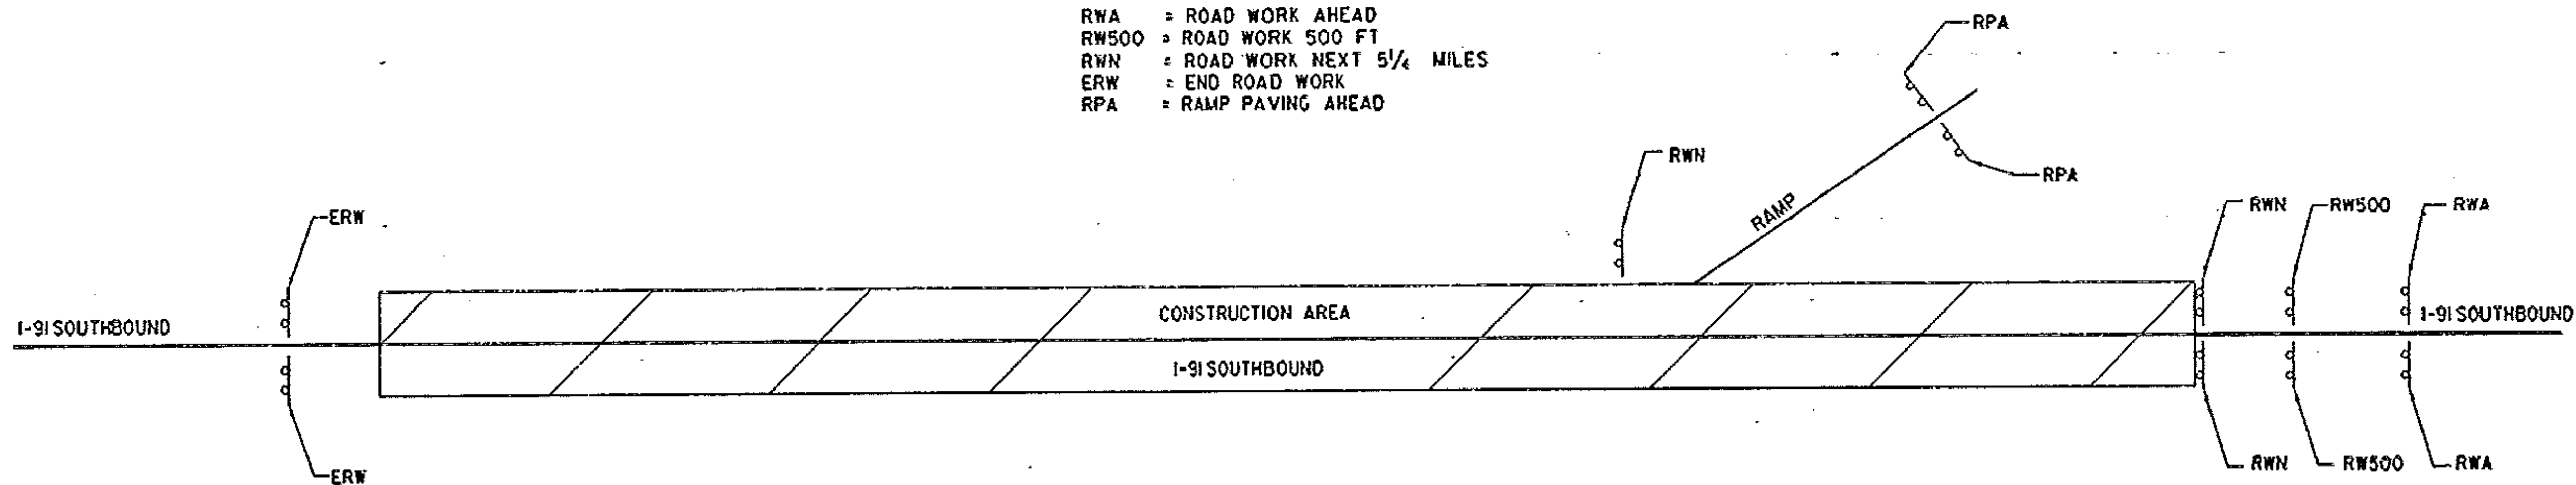

CONSTRUCTION APPROACH SIGNING

NOT TO SCALE
SEE STD. E-100 FOR SIGN PLACEMENT

US HIGHWAY NAME	ROAD WORK AHEAD	END ROAD WORK	ROAD WORK 500'	ROAD WORK NEXT 5/4 MILES	RAMP PAVING AHEAD	OTHER
I-91 SOUTHBOUND						
SOUTHBOUND ON RAMP				1	2	
BEGINNING OF PROJECT	2		2	2		
END OF PROJECT		2				
TOTAL	2	2	2	3	2	

DATUM _____
VERTICAL _____
HORIZONTAL _____

CONSTRUCTION APPROACH SIGNING	PROJECT: SHEFFIELD-BARTON	PROJECT NO.: IM 091-3(9)
	DESIGN FILE NAME: /dave/97a018/pa018.dgn	PLOT DATE: 16-JUL-1997
	PARM FILE NAME: /dave/97a018/pa018ca1	SURVEY DATE: 4/97
	SURVEYED BY: CLO mg	DRAWN BY: NLL
	SQUAD LEADER: JAW	SHEET: 5 OF 5