


Construct Drive
362+00±

Construct Turnoff
357+50 ~ 359+00±

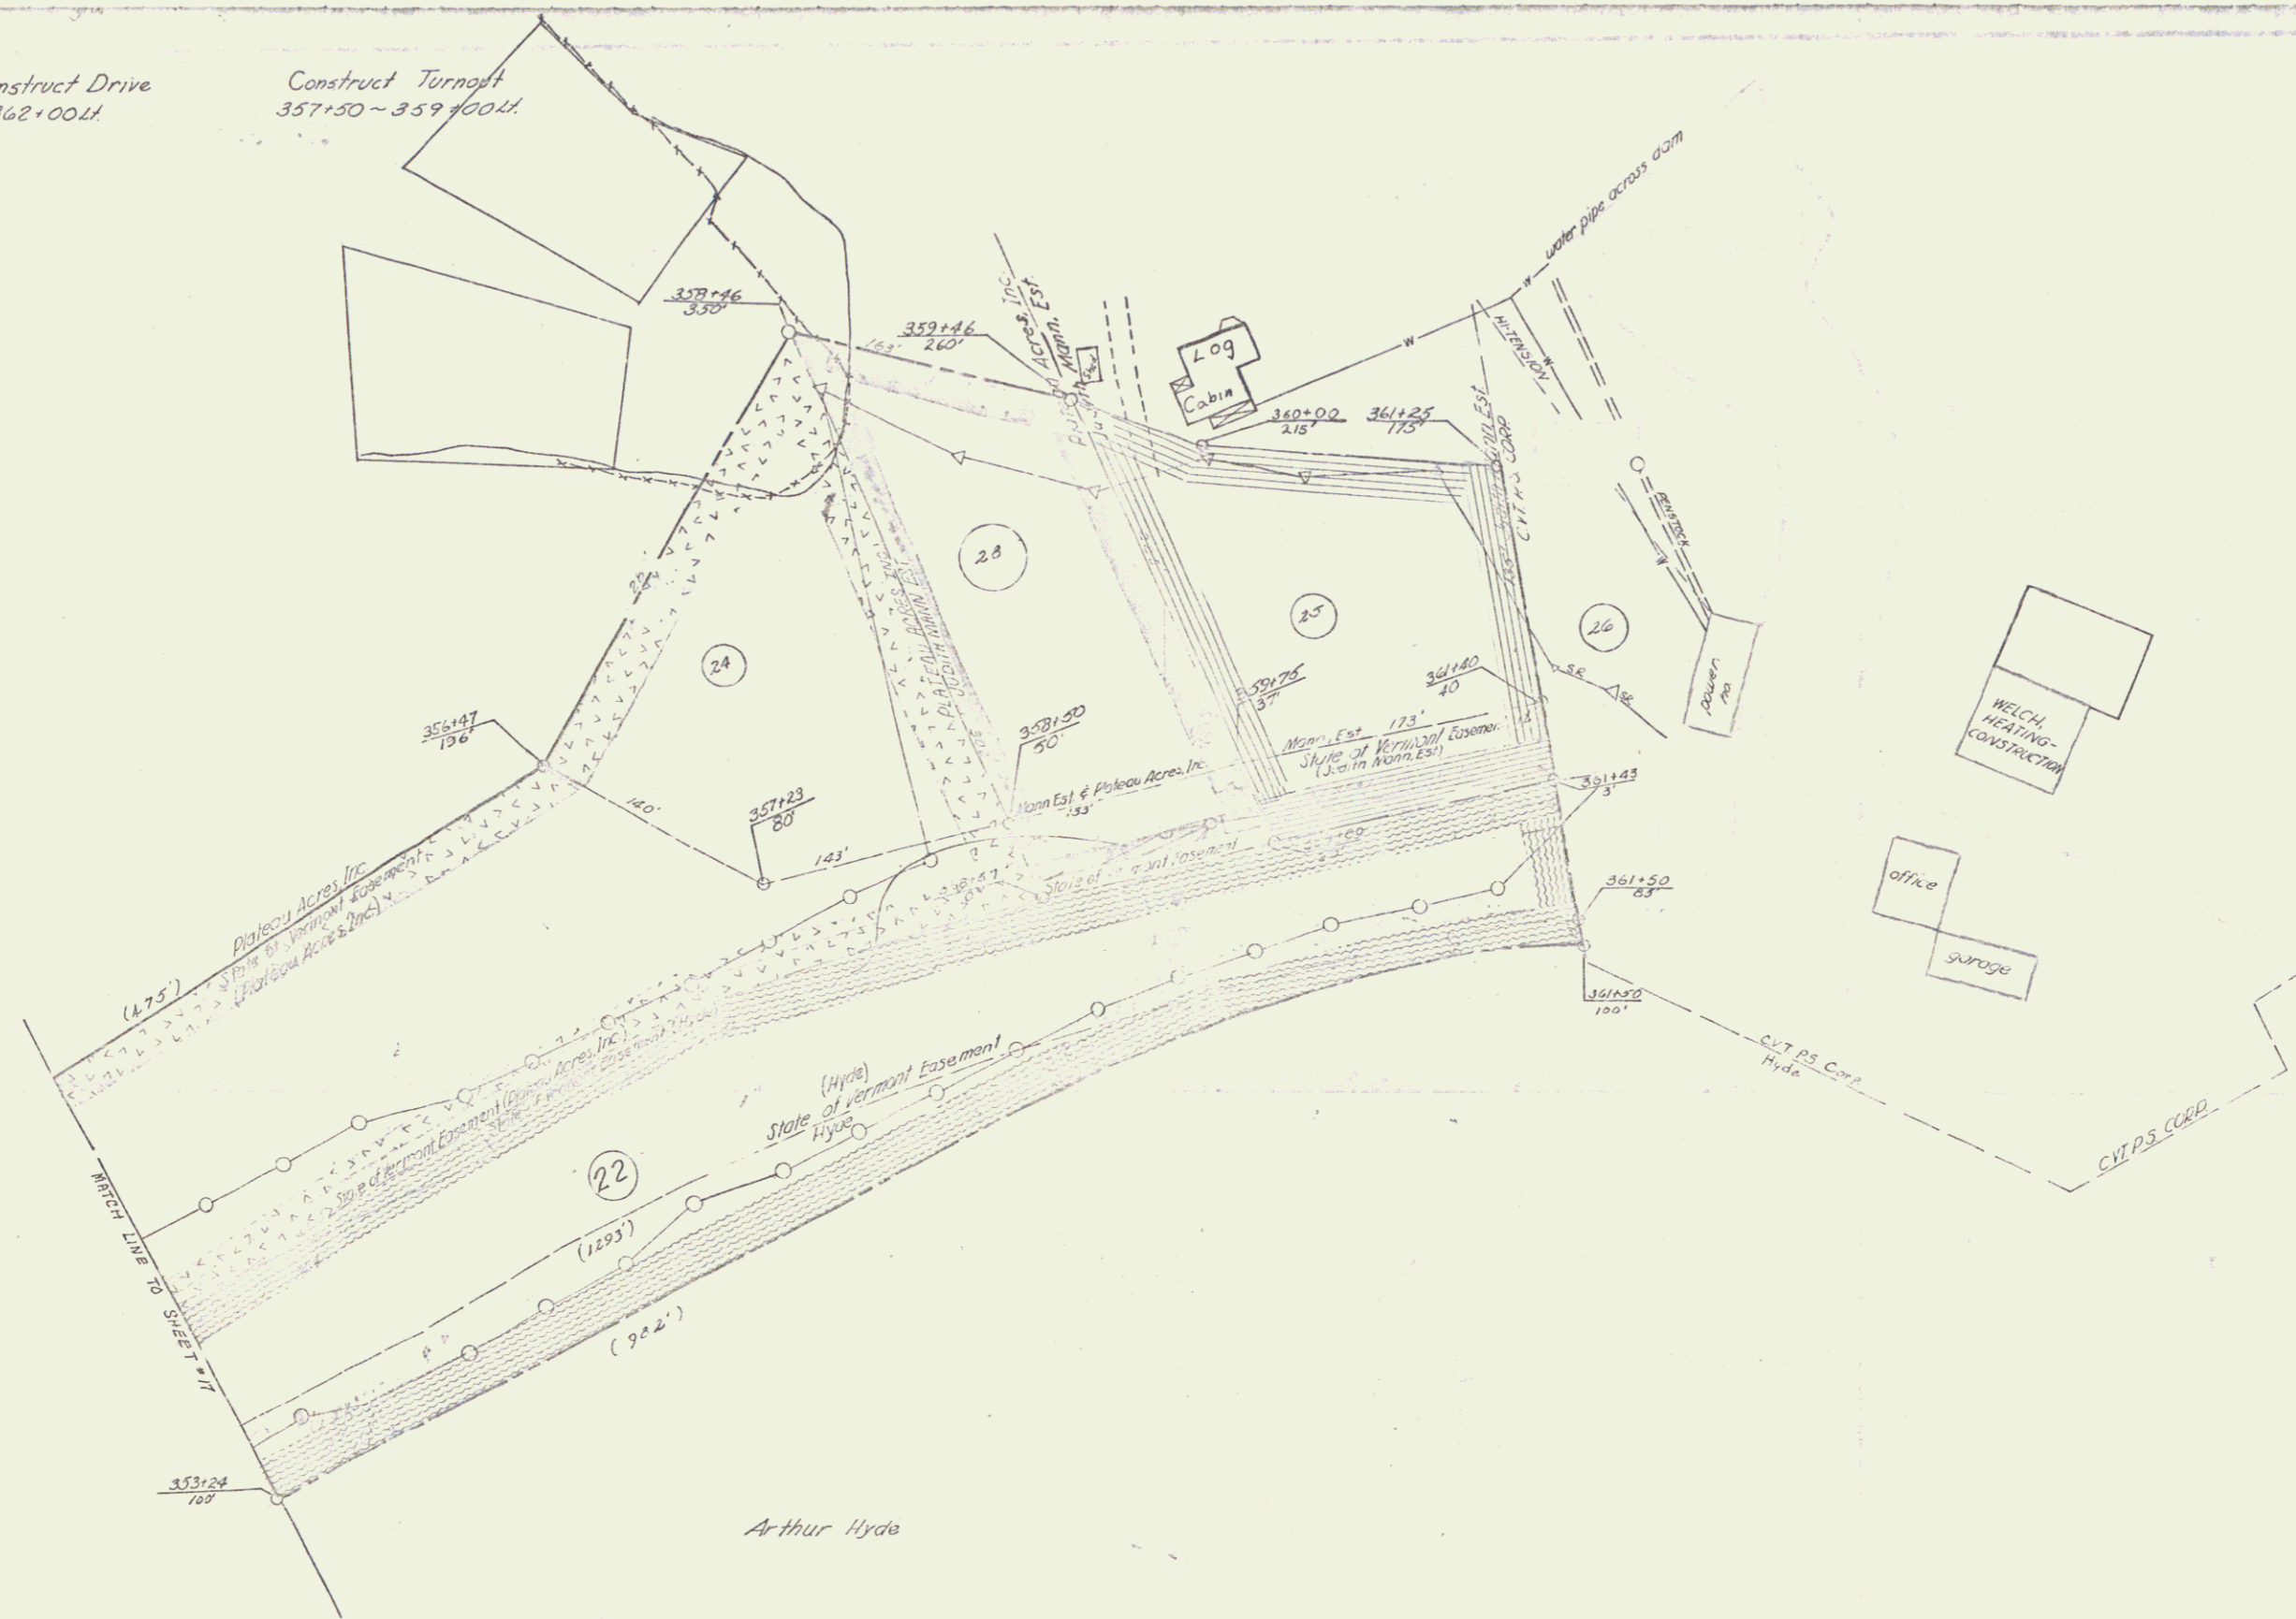

VERMONT DEPARTMENT OF HIGHWAYS
RIGHT-OF-WAY PLANS
PROJECT BRADFORD
No FO41-3(A)
SHEET 19 OF 24

