

CONSTRUCTION APPROACH SIGNING

NOT TO SCALE


SEE STD E-100 AND E-100A FOR SIGN PLACEMENT

NOTE:

1. WHEN DIRECTED BY THE RESIDENT ENGINEER, "NO OUTLET" SIDE ROADS WILL NOT REQUIRE CONSTRUCTION SIGNING.
2. PAYMENT FOR CONSTRUCTION APPROACH SIGNING WILL BE MADE UNDER ITEM 641.10, TRAFFIC CONTROL.

LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK 500 FT
- RWN = ROAD WORK NEXT 1 MILE
- ERW = END ROAD WORK
- SRWA = SIDE ROAD WORK AHEAD
- SRW500 = SIDE ROAD WORK 500 FT

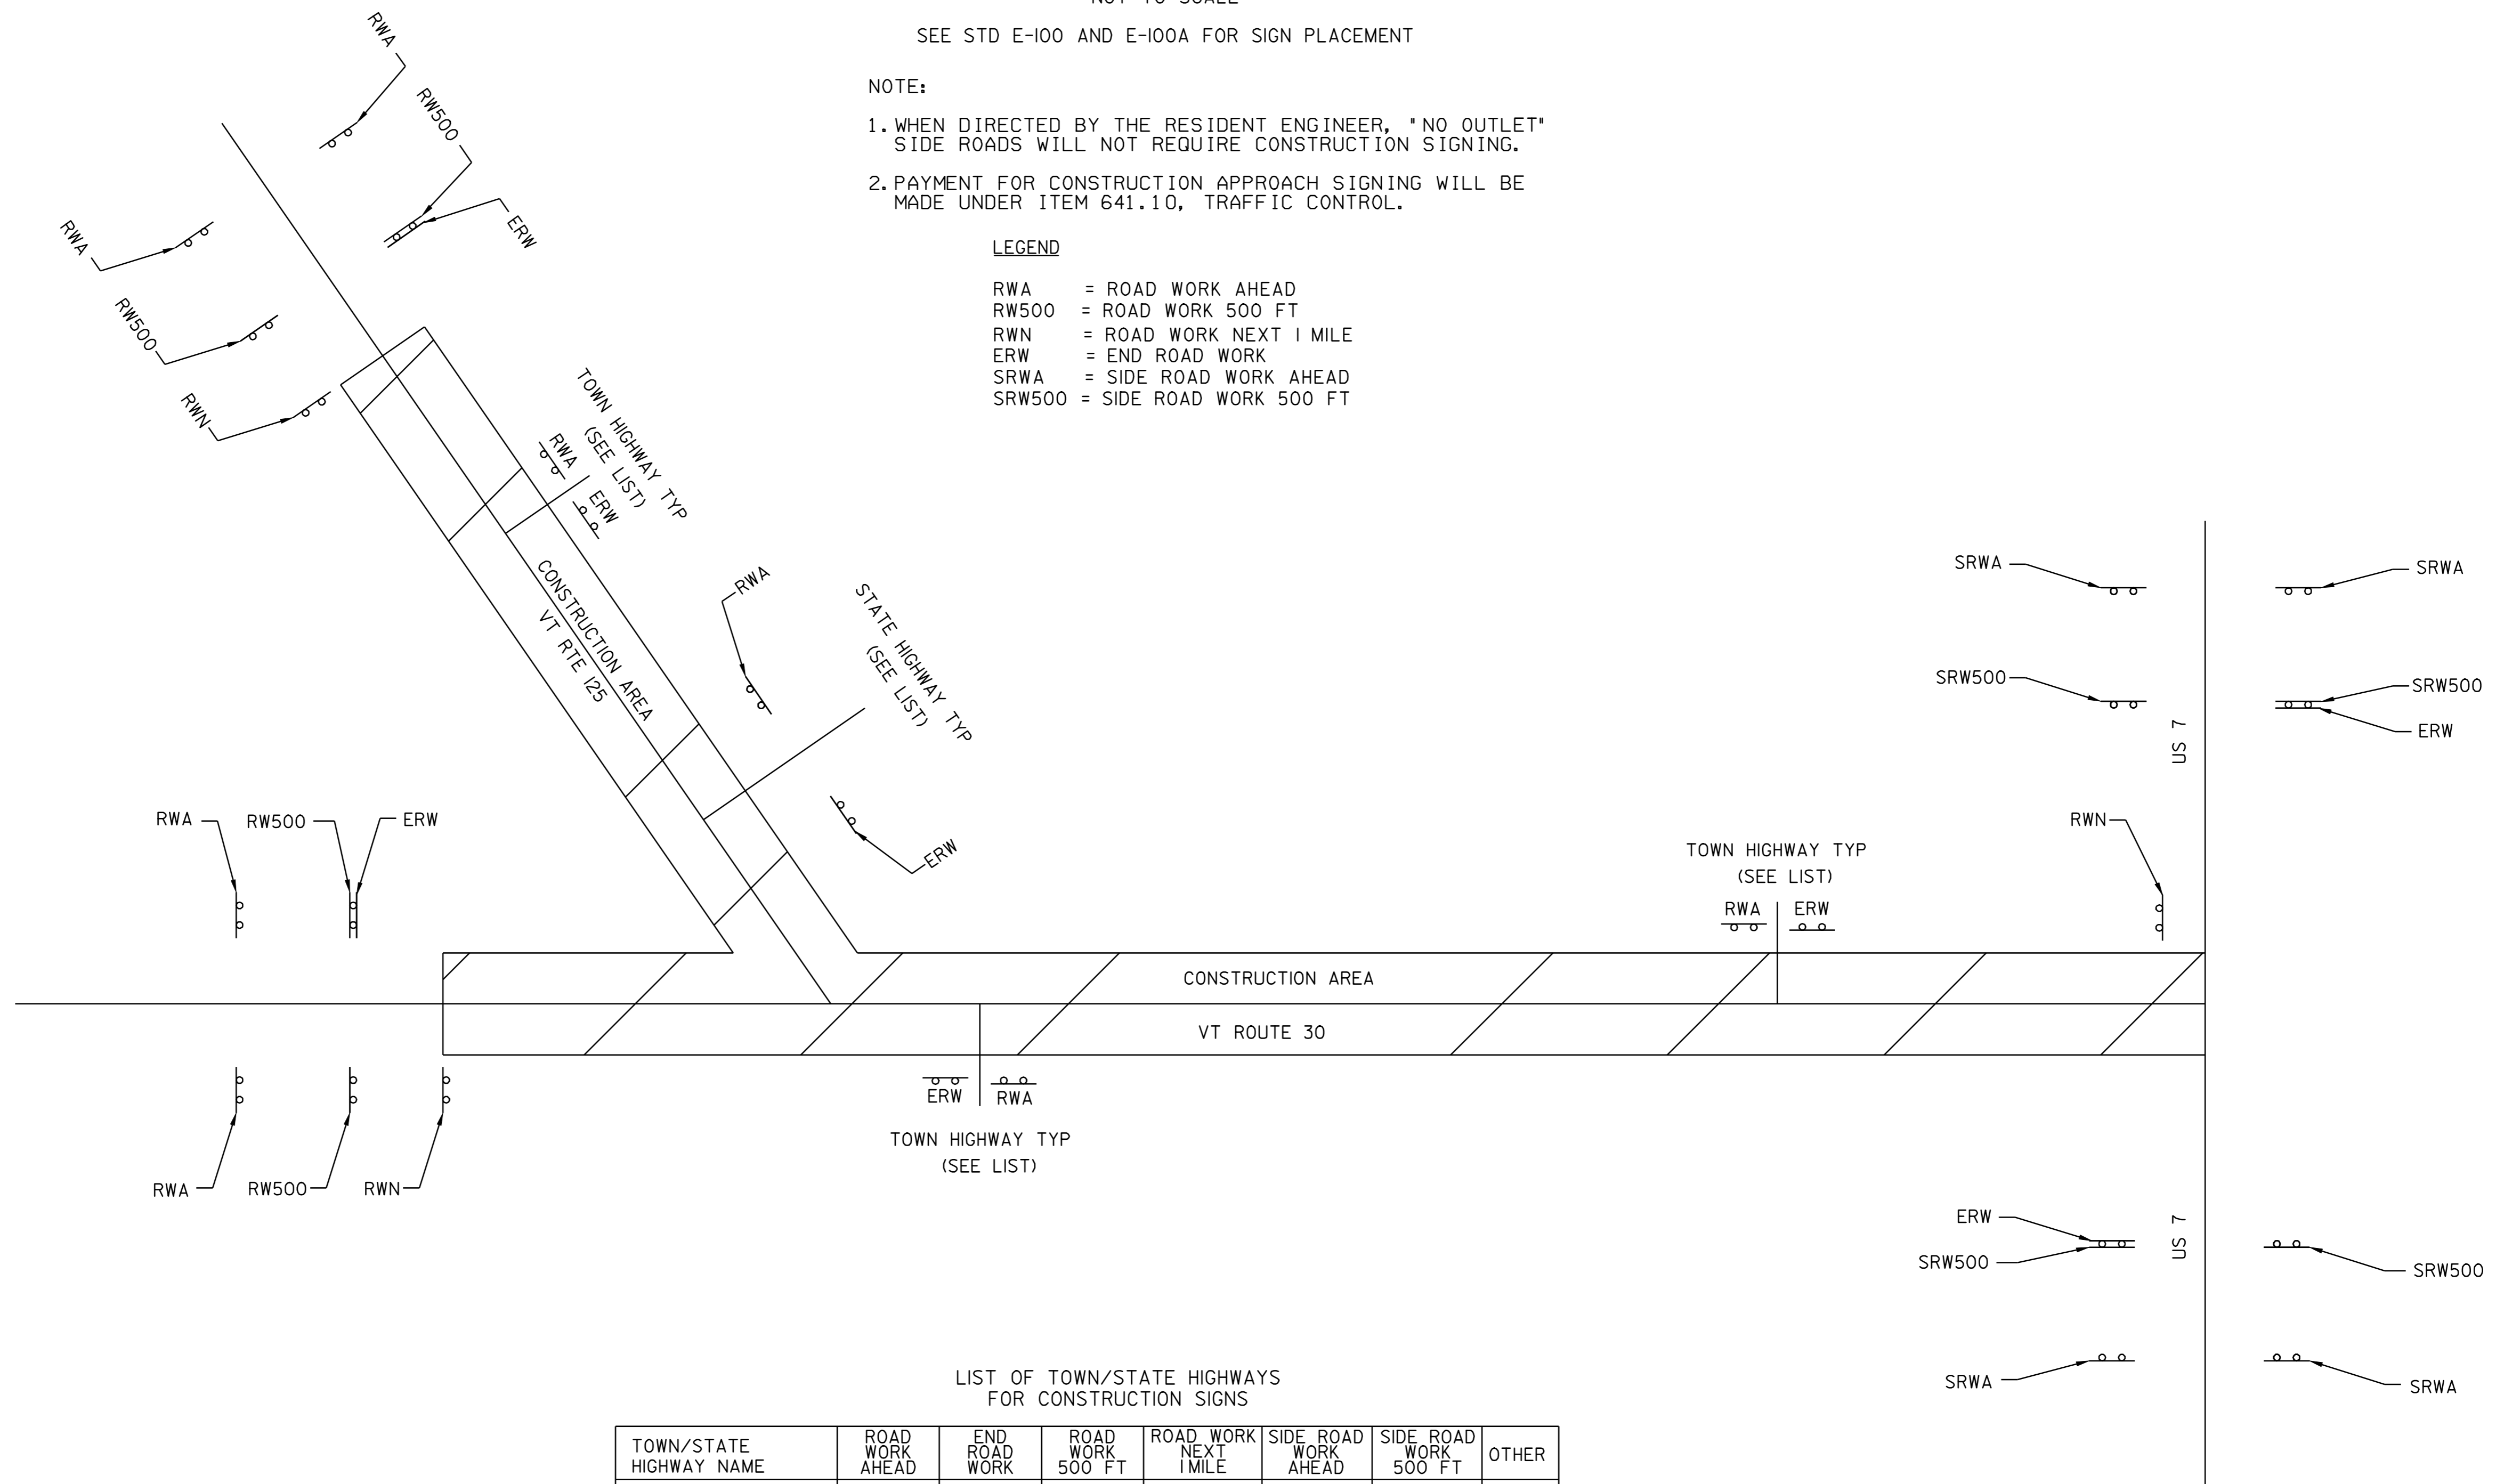

LIST OF TOWN/STATE HIGHWAYS FOR CONSTRUCTION SIGNS

TOWN/STATE HIGHWAY NAME	ROAD WORK AHEAD	END ROAD WORK	ROAD WORK 500 FT	ROAD WORK NEXT 1 MILE	SIDE ROAD WORK AHEAD	SIDE ROAD WORK 500 FT	OTHER
VT ROUTE 30							
TH 96	1	1					
TH 57	1	1					
TH 6	1	1					
TH 51	1	1					
TH 69	1	1					
TH 68	1	1					
TH 51	1	1					
SA 8	1	1					
SA 5	1	1					
VT ROUTE 125	1	1					
TH 59							
TH 58	1	1					
TH 61	1	1					
TH 57	1	1					
VT RTE 23	1	1					
BEGINNING OF PROJECT	4	2	4	2			
END OF PROJECT		2	2	1	4	4	
TOTALS	18	17	6	3	4	4	

CONSTRUCTION APPROACH SIGNING

PROJECT NAME:	MIDDLEBURY	FILE NAME:	/pave/01d048/pd048.dgn	PLOT DATE:	06-OCT-2008 13:00
PROJECT NUMBER:	STP 2304(I)S	PROJECT LEADER:	PTS	DRAWN BY:	MRS
		IPARM FILE NAME:	pd048cas.i	CHECKED BY:	NLL
				SHEET	55 OF 103