

CONSTRUCTION APPROACH SIGNING

NOT TO SCALE


SEE STD E-100 AND E-100A FOR SIGN PLACEMENT

NOTE:

1. WHEN DIRECTED BY THE RESIDENT ENGINEER, "NO OUTLET" SIDE ROADS WILL NOT REQUIRE CONSTRUCTION SIGNING.
2. PAYMENT FOR CONSTRUCTION APPROACH SIGNING WILL BE MADE UNDER ITEM 641.10, TRAFFIC CONTROL.

LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK 500 FT
- RWN = ROAD WORK NEXT 2 MILES
- ERW = END ROAD WORK
- SRWA = SIDE ROAD WORK AHEAD
- SRW500 = SIDE ROAD WORK 500 FT

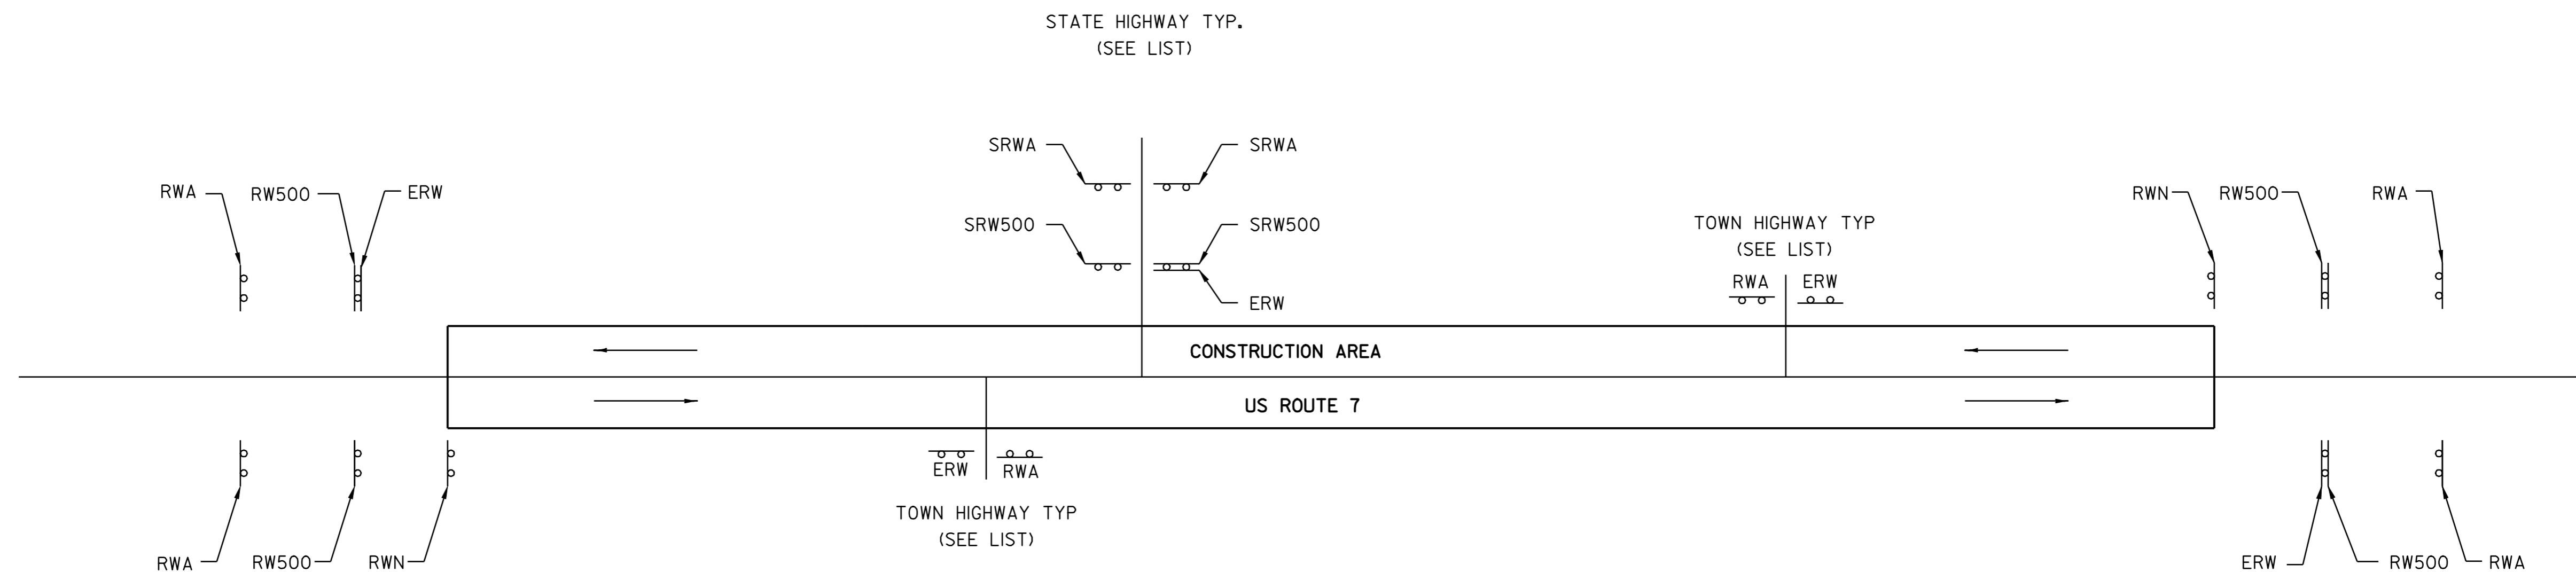

LIST OF TOWN/STATE HIGHWAYS FOR CONSTRUCTION SIGNS

TOWN/STATE HIGHWAY NAME	ROAD WORK AHEAD	END ROAD WORK	ROAD WORK 500 FT	ROAD WORK NEXT 2 MILES	SIDE ROAD WORK AHEAD	SIDE ROAD WORK 500 FT	OTHER
MIDDLEBURY US 7							
TH 6	1	1					
SA 8	1	1					
TH 47	1	1					
VT 30		1			2	2	
SA 7	1	1					
TH 71		1					
TH 75	1	1					
TH 72	1	1					
TH 74	1						
BEGINNING OF PROJECT	2	1	2	1			
END OF PROJECT	2	1	2	1			
TOTALS	11	10	4	2	2	2	

CONSTRUCTION APPROACH SIGNING

PROJECT NAME: MIDDLEBURY
 PROJECT NUMBER: NH 2603(I)S
 FILE NAME: /pave/06b032/p06b032.dgn PLOT DATE: 06-OCT-2008 13:1
 PROJECT LEADER: PTS DRAWN BY: MRS
 DESIGNED BY: NLL CHECKED BY: NLL
 IPARM FILE NAME: p06b032cas.i SHEET 103 OF 103