


GREEN PAINTED BIKE LANE / RIGHT TURN LANE PAVEMENT MARKINGS

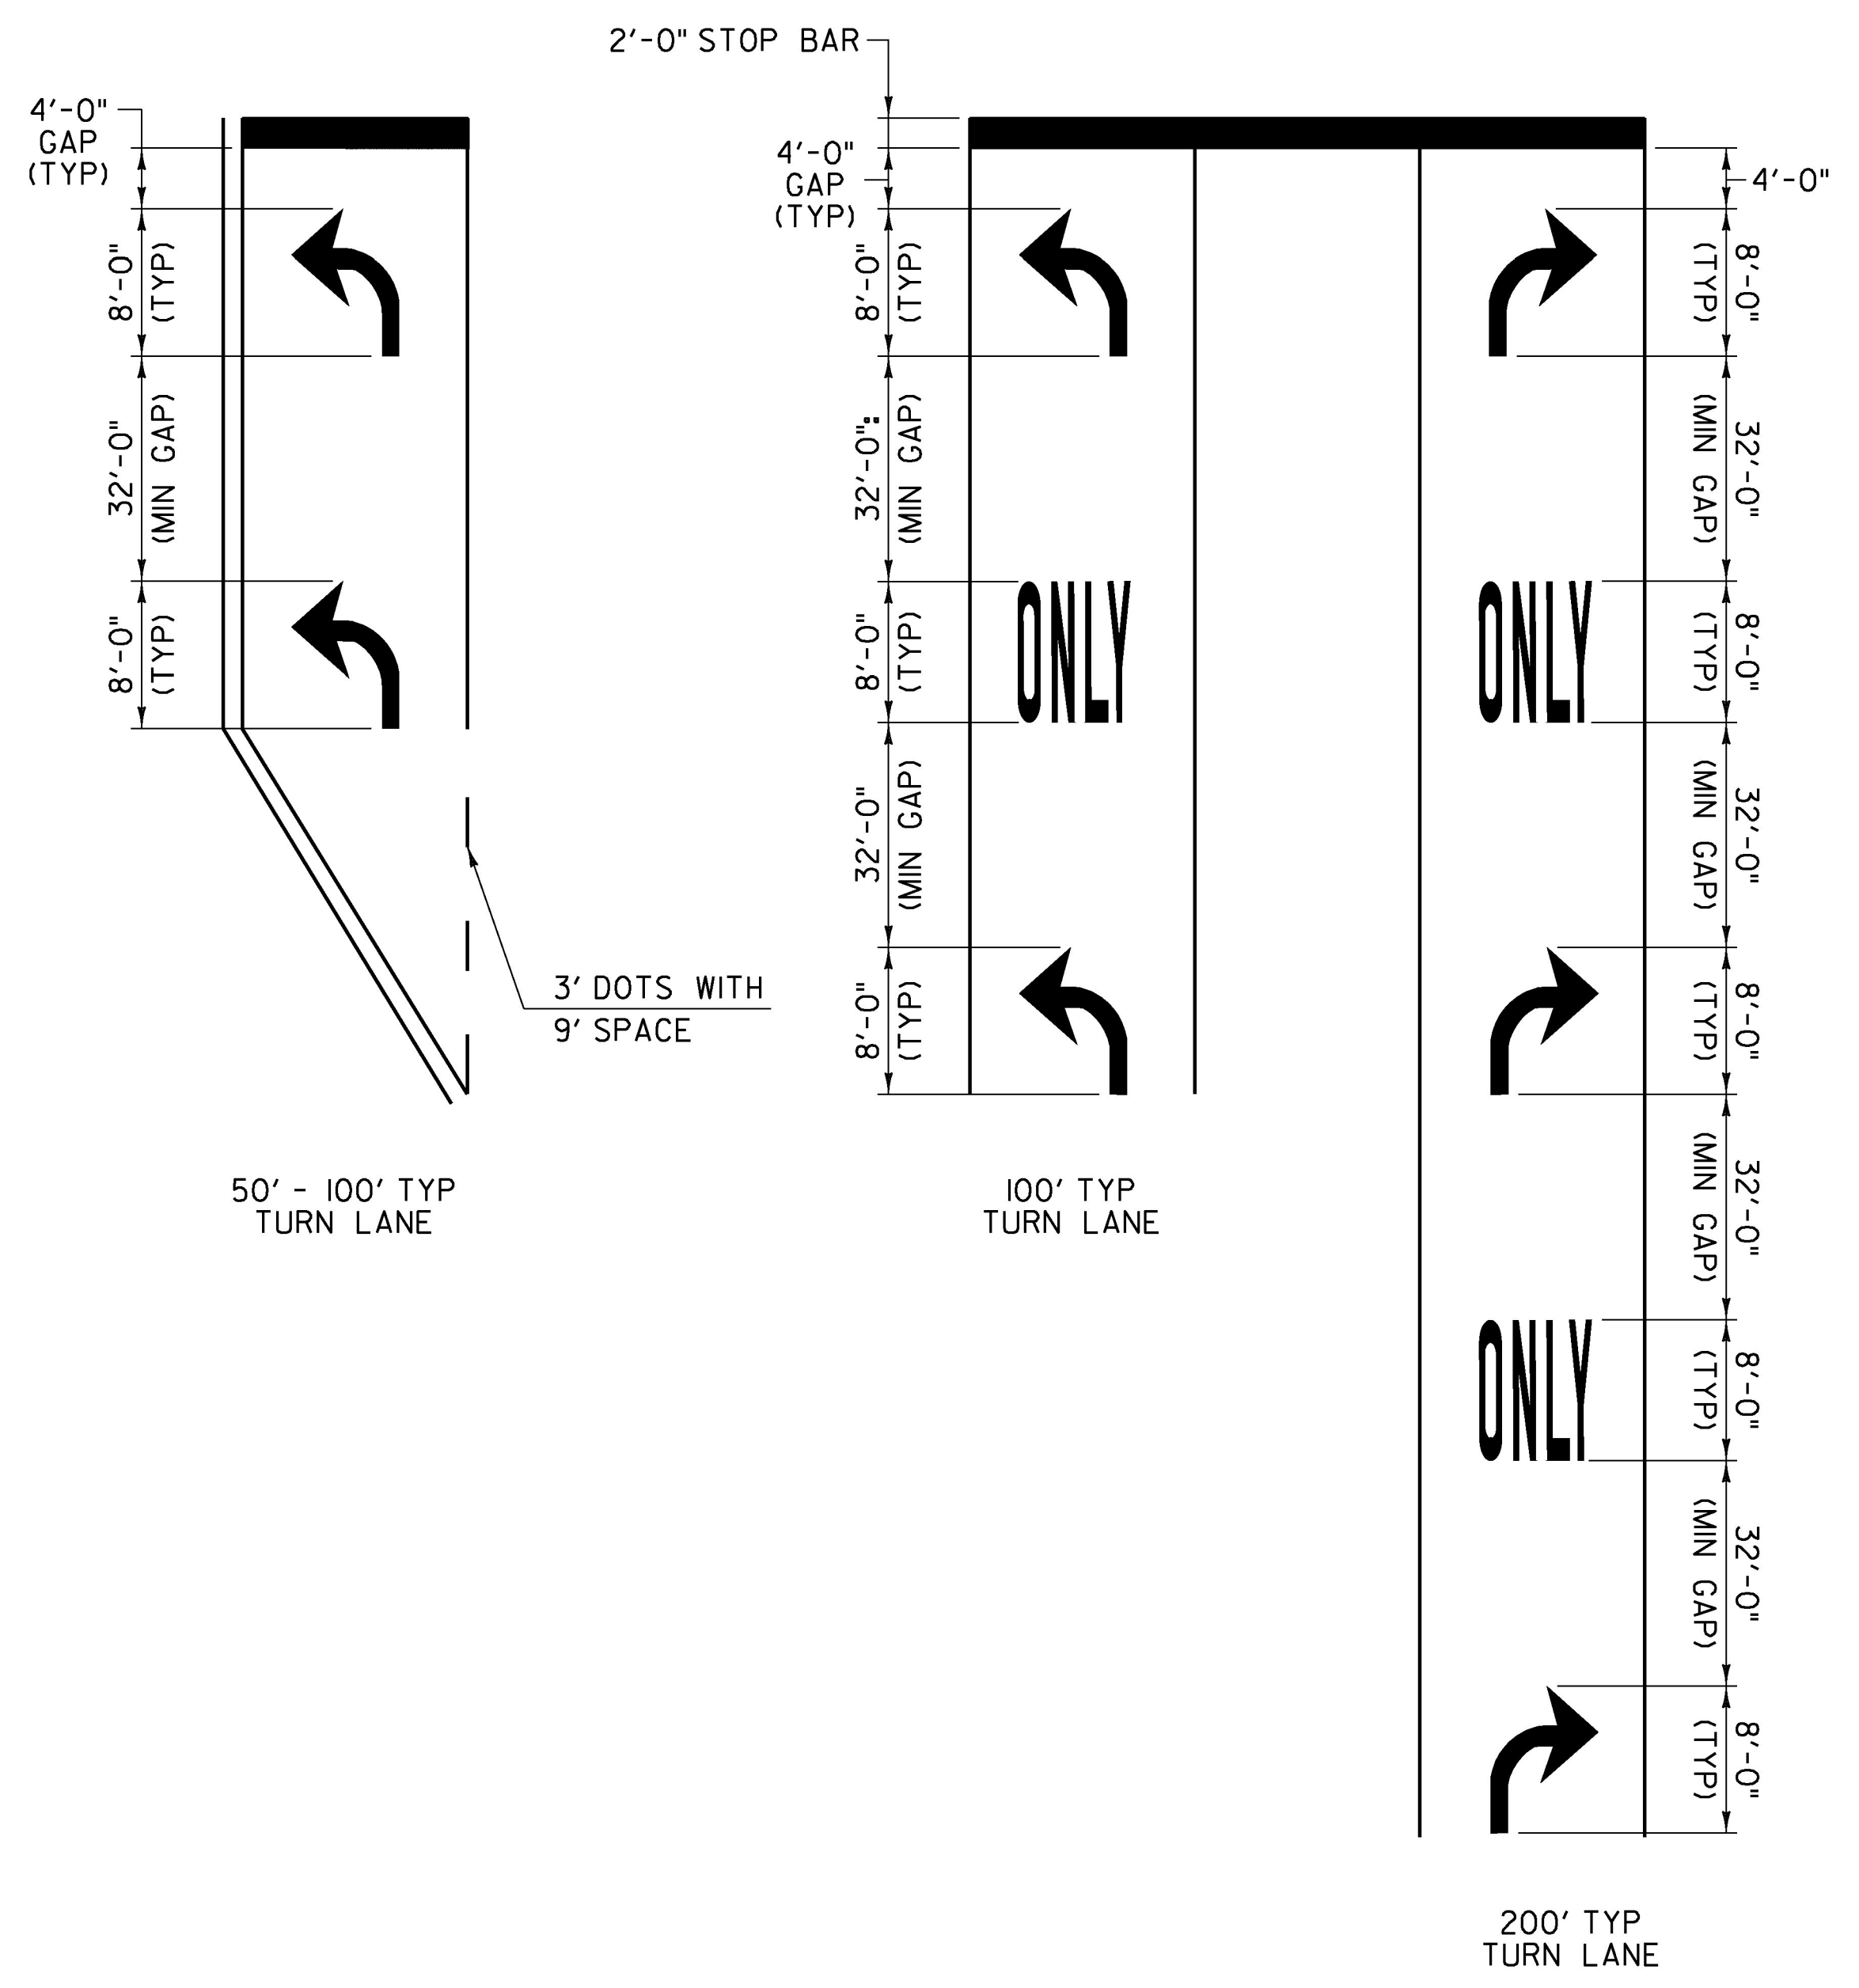

TYPICAL MARKINGS FOR TURN LANES

- NOTES:
1. TURN ARROWS SHALL BE PLACED AT THE BEGINNING AND END OF THE LEFT OR RIGHT TURN LANE.
 2. THE "ONLY" WORD MARKINGS SHALL BE USED TO SUPPLEMENT LANE-USE ARROW MARKINGS FOR TURN LANES 100' OR LONGER.
 3. THE LONGITUDINAL SPACE BETWEEN WORD OR SYMBOL MESSAGE MARKINGS, SHOULD BE AT LEAST FOUR TIMES THE HEIGHT OF THE CHARACTERS FOR LOW SPEED ROADS, BUT NOT MORE THAN TEN TIMES THE HEIGHT OF THE CHARACTERS UNDER ANY CONDITIONS.
 4. STOP BARS ARE INSTALLED ONLY WHERE A STOP SIGN OR TRAFFIC SIGNAL ARE LOCATED.
 5. MORE ARROWS AND ONLYS ARE OPTIONAL WHEN SPACE PERMITS. ARROW MARKINGS START AT THE BEGINNING OF THE SOLID LANE LINE.
 6. EXCLUSIVE TURN (LEFT OR RIGHT) LANE LINES SHALL BE SOLID AND EXTEND BACK FROM THE STOP LINE TO THE POINT OF FULL LANE WIDTH OF THE TURN LANE. THREE FOOT DOTS WITH A NINE FOOT SPACE SHOULD BE EXTENDED THE FULL LENGTH OF THE LANE TAPER.

NOT TO SCALE

PROJECT NAME:	WILLISTON
PROJECT NUMBER:	NH 2949(I)
FILE NAME:	z12d224de+all.dgn
PROJECT LEADER:	G. EDWARDS
DESIGNED BY:	D. BARNES
MISCELLANEOUS DETAIL SHEET	6
PLOT DATE:	2/15/2017
DRAWN BY:	D. BARNES
CHECKED BY:	J. LITTLE
SHEET	211 OF 249

