



SHOREHAM

BRIDPORT

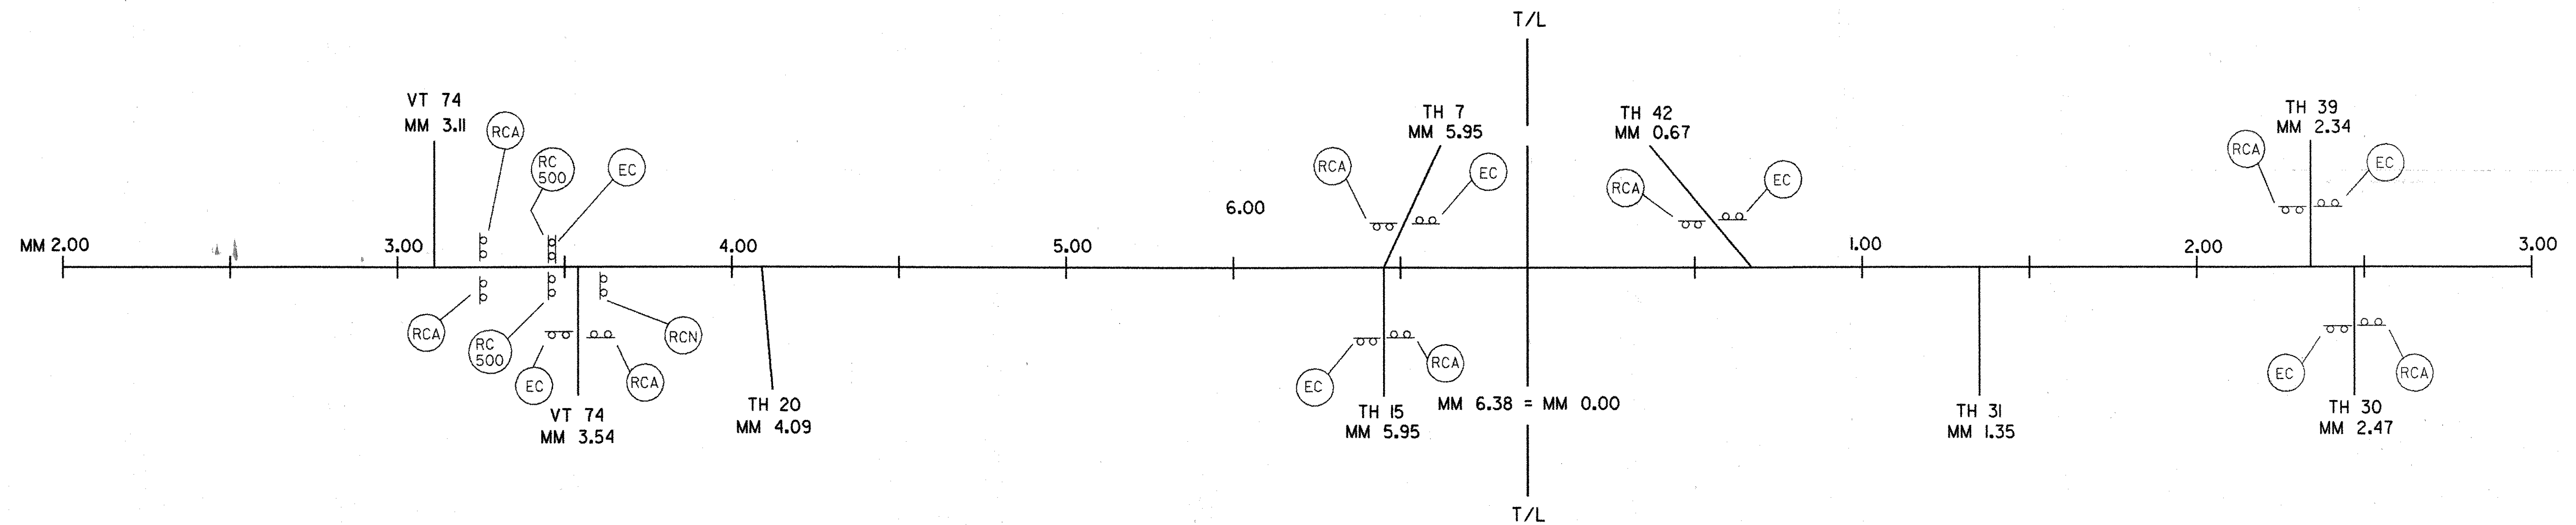

BRIDPORT

ADDISON

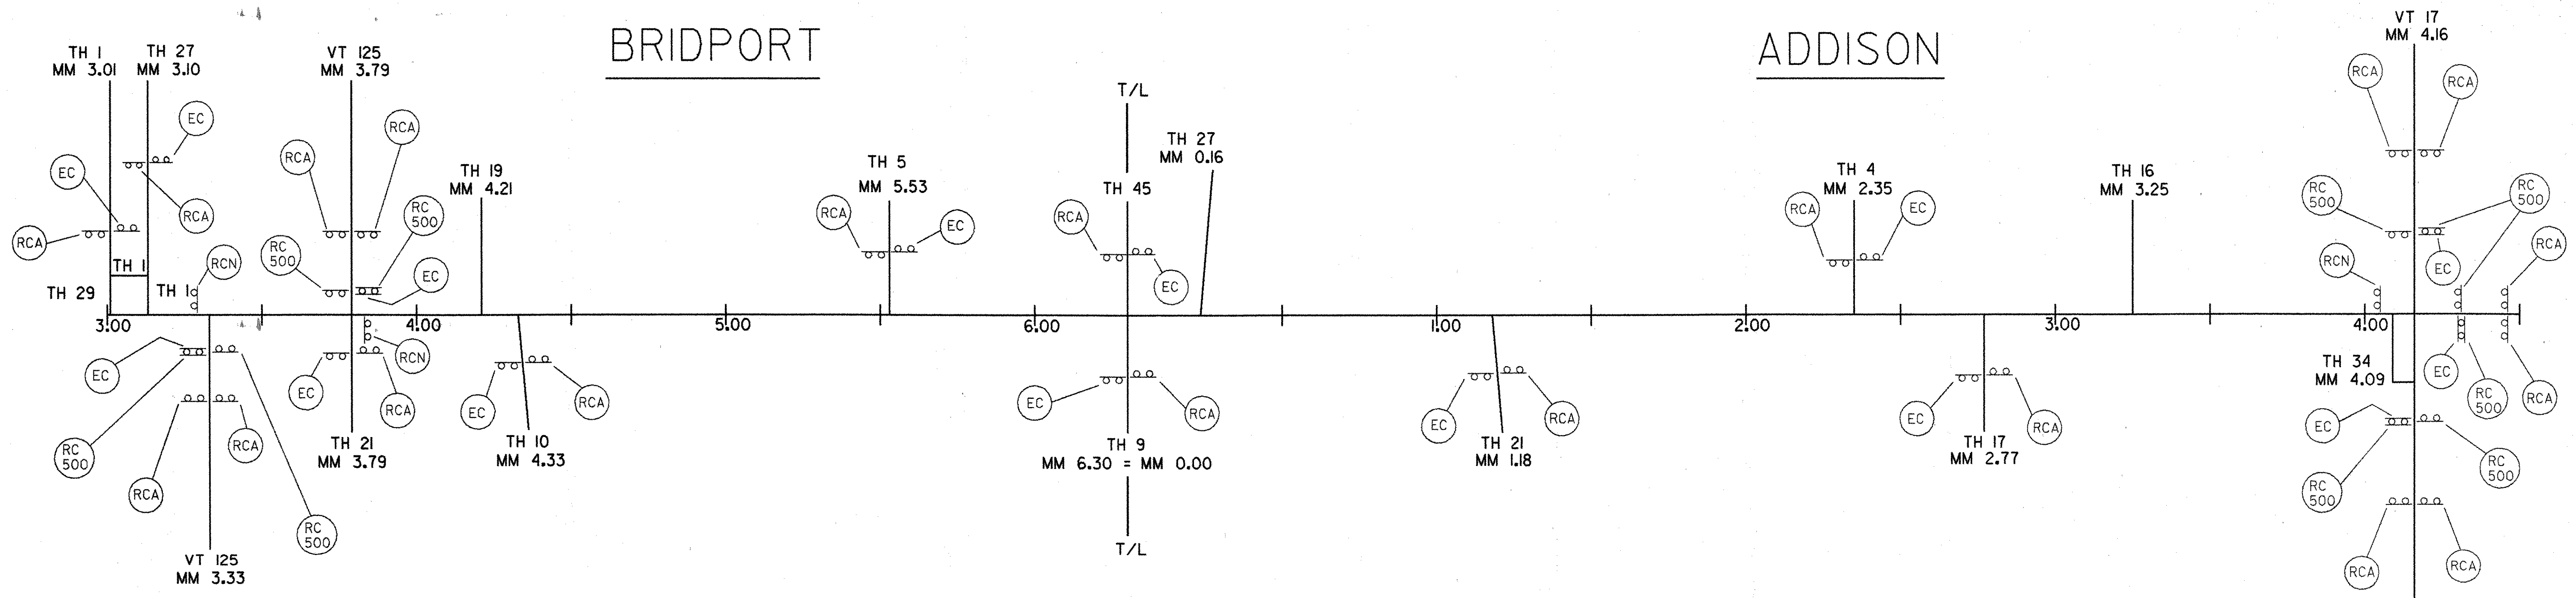

SIGNS ON VT 125 SHOULD BE PLACED TO ENCOMPASS WORK BEING DONE ON VT 125.

CONSTRUCTION APPROACH SIGNING

NOT TO SCALE
(SEE STANDARD E-100)

LEGEND	
RCA	= ROAD CONSTRUCTION AHEAD
RC 500	= ROAD CONSTRUCTION 500 FT
EC	= END CONSTRUCTION
RCN	= ROAD CONSTRUCTION NEXT MILES

SURVEYED BY	DATE
DRAWN BY <u>L. BULLOCK</u>	DATE <u>3/89</u>
SQUAD LEADER <u>J. PERKINS</u>	
DESIGN FILE NO. <u>ZG00150,63183B030.DGN</u>	
PROJ. NAME <u>SHOREHAM-BRIDPORT-ADDISON</u>	
PROJ. NO. <u>F 017-1(2)</u>	
SHEET <u>236</u> OF 420 SHEETS	
<u>SHEET 236 OF 477</u>	