


NOTES:

1. PRECAST CONCRETE WALL CAP NOT SHOWN IN PLAN VIEWS FOR CLARITY.
2. CAST-IN-PLACE CONCRETE COLLAR AND COLLAR/WALL CAP COMBINATION SHALL BE POURED AFTER THE VIST-A-WALL PANELS ARE IN PLACE.
3. CAST-IN-PLACE CONCRETE COLLAR WILL VARY IN WIDTH AND WILL EXTEND FROM EACH END OF THE CORRUGATED STRUCTURAL STEEL PLATE ARCH TO THE NORTH/SOUTH FACE OF THE VIST-A-WALL ARCHITECTURAL PATTERN, AS APPLICABLE. 1/2" OF COMPRESSIBLE FILLER SHALL BE PROVIDED BETWEEN THE ARCHITECTURAL PATTERN AND THE CAST-IN-PLACE CONCRETE COLLAR.
4. THE TOP OF CAST-IN-PLACE CONCRETE COLLAR/CAP COMBINATION SHALL MATCH INTO THE TOP OF PRECAST CONCRETE WALL CAP AT WP8 AND WP9.
5. SEE SHEET 36 FOR SECTIONS A-A, B-B, AND C-C AND SHEET 36 FOR REINFORCING DETAILS.

PROJECT NAME:	ST. JOHNSBURY	PLOT DATE:	10/26/2016
PROJECT NUMBER:	BF 7000(20)	DRAWN BY:	M.SMITH
FILE NAME:	86e048/cos/z86e048sub.dgn	CHECKED BY:	A. GIRALDI
DESIGNED BY:	S. BEAUMONT	STRUCTURE DETAILS SHEET 1	SHEET 35 OF 70

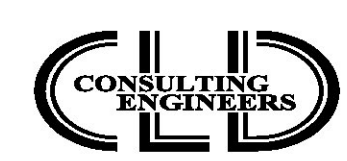

MODEL: SUB06
CLD 14-016