


LEGEND
 RWA = ROAD WORK AHEAD
 RW500 = ROAD WORK 500'
 EW = END WORK
 RWN = ROAD WORK NEXT
 SRWA = SIDE ROAD WORK AHEAD
 SRW500 = SIDE ROAD WORK 500'

CONSTRUCTION APPROACH SIGNING

SEE STD. E-100 FOR SIGN PLACEMENT

- NOTES:**
1. "HIGH SHOULDER" WARNING SIGNS SHALL BE PLACED EVERY 1000 FT. WITHIN THE WORK ZONES THAT ARE TO BE COLD PLANED.
 2. "HIGH SHOULDER" WARNING SIGNS SHALL BE GATEPOSTED
 3. SIDE ROADS WITHIN COLD PLANED AREAS SHALL BE SIGNED

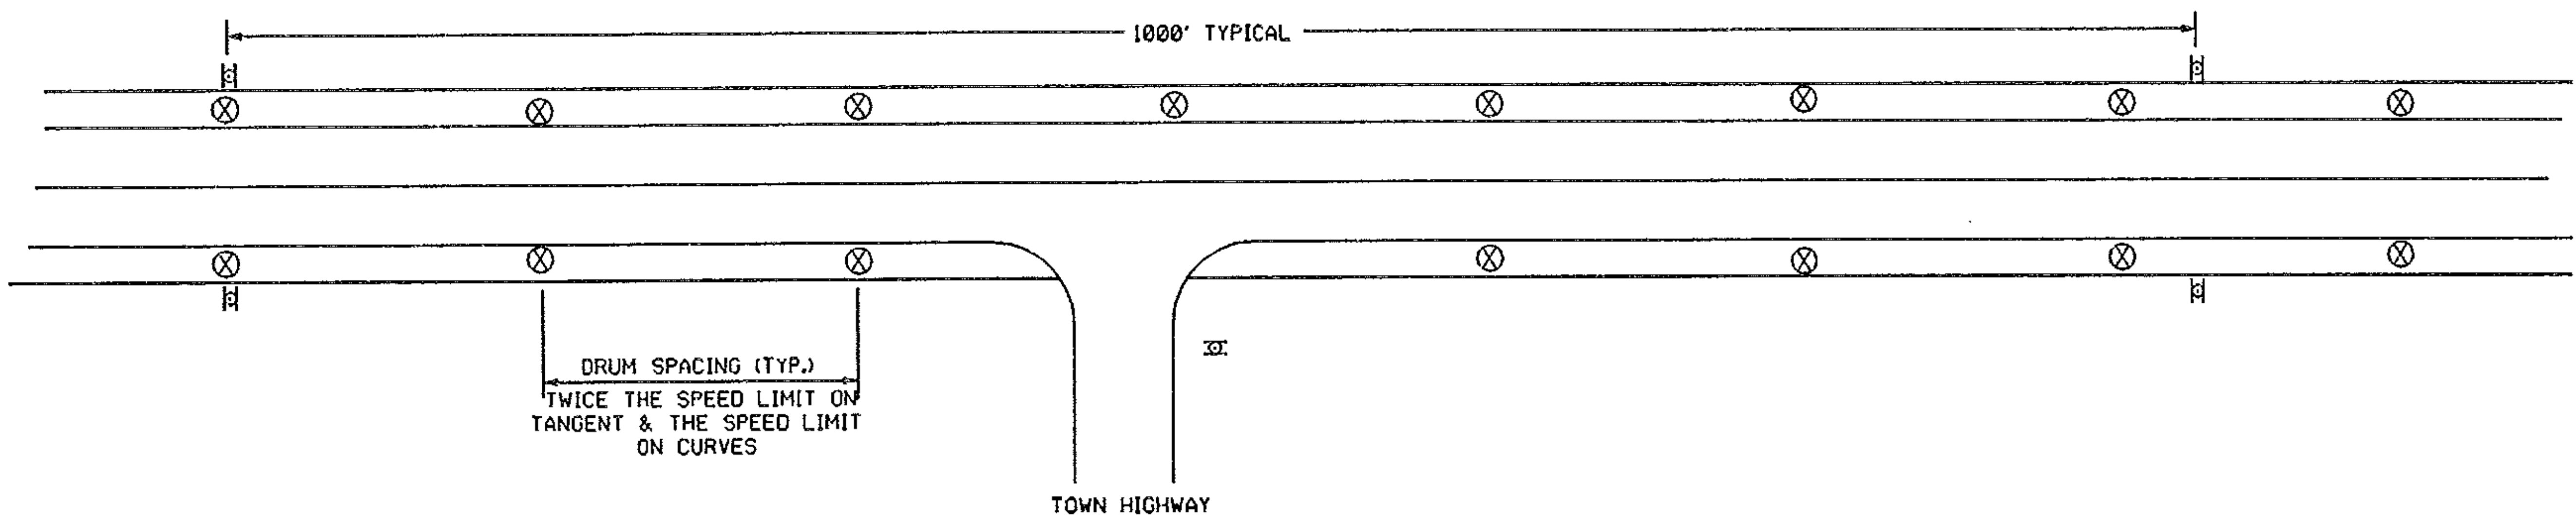

TRAFFIC CONTROL DETAIL FOR COLD PLANED AREAS

LEGEND
 ⊗ REFLECTORIZED PLASTIC DRUM
 SEE STD E-106
 ▭ "HIGH SHOULDER" WARNING SIGN
 SEE STD E-101

**CONSTRUCTION APPROACH
 SIGNING
 &
 TRAFFIC CONTROL DETAIL FOR
 COLD PLANED AREAS**

DESIGNED BY BCE/M/JW DATE 1-96
 DRAWN BY C.E.A., INC. DATE 1-96
 DESIGN FILE NO. /pave/95c054/pc054.dgn
 PRF FILE pc054cs.1 DATE PLOTTED 3-APR-1996
 PROJ. NAME DERBY LINE
 PROJ. NO. STP 9620(1)S
 SHEET 10 OF 12 SHEETS

DATE
 VERTICAL N/A
 HORIZONTAL N/A