


LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK 500'
- RWN = ROAD WORK NEXT 7 MILES
- ERW = END ROAD WORK
- SRWA = SIDE ROAD WORK AHEAD
- SRW500 = SIDE ROAD WORK 500'

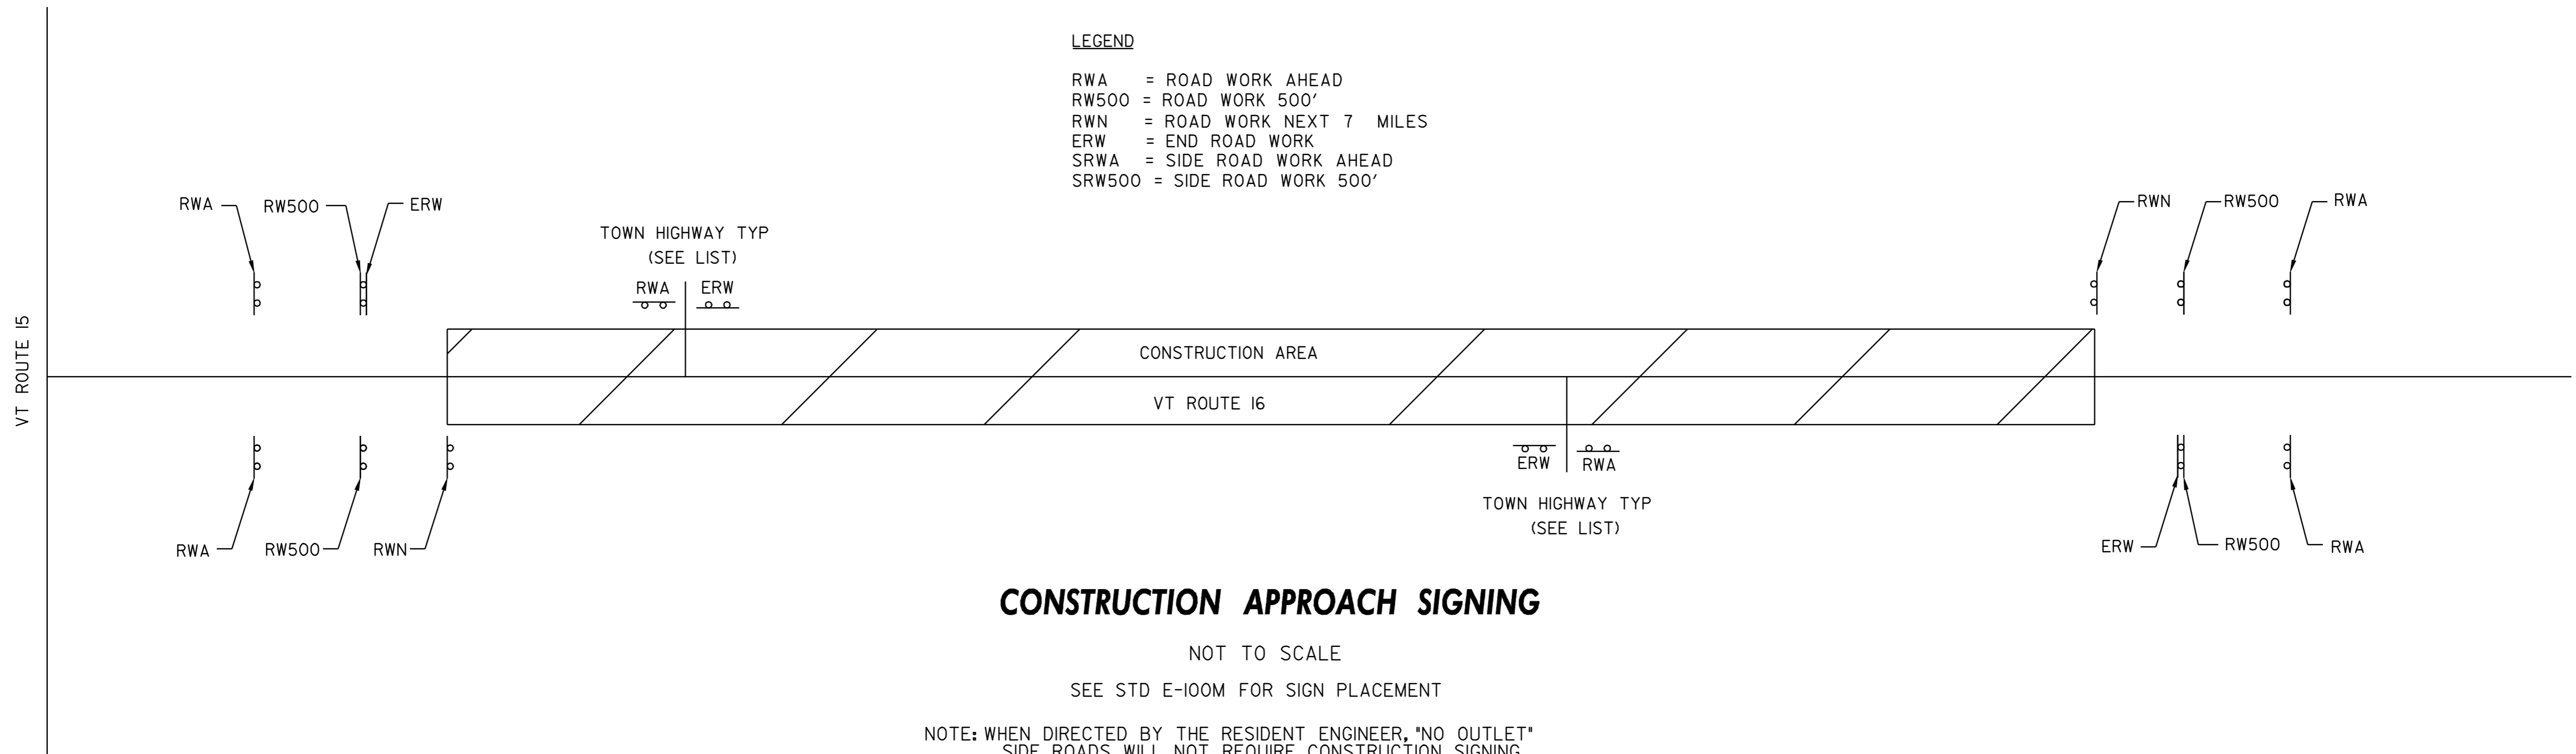

CONSTRUCTION APPROACH SIGNING

NOT TO SCALE

SEE STD E-100M FOR SIGN PLACEMENT

NOTE: WHEN DIRECTED BY THE RESIDENT ENGINEER, "NO OUTLET" SIDE ROADS WILL NOT REQUIRE CONSTRUCTION SIGNING

LIST OF TOWN/STATE HIGHWAYS FOR CONSTRUCTION SIGNS

TOWN/STATE HIGHWAY NAME	ROAD WORK AHEAD	END ROAD WORK	ROAD WORK 500'	ROAD WORK NEXT 7 MILES	SIDE ROAD WORK AHEAD	SIDE ROAD WORK 500'	OTHER
HARDWICK							
S.A. 6	1	1					
TH #32	1	1					
S.A. 7	1	1					
S.A. 1	1	1					
TH #66							
TH #14	1	1					
TH #62	1	1					
TH #71	1	1					
S.A. 5	1	1					
GREENSBORO							
TH #63	1	1					
S.A. 1	1	1					
S.A. 1	1	1					
S.A. 4	1	1					
TH #54 LEG 1	1	1					
TH #54 LEG 2	1	1					
TH #56							
TH #66							
TH #44	1	1					
TH #68	1	1					
TH #40	1	1					
TH #39	1	1					
TH #21	1	1					
BEGINNING OF PROJECT	2	1	2	1			
END OF PROJECT	2	1	2	1			
TOTAL	23	21	4	2			

NOTE: ALL DIMENSIONS IN METERS EXCEPT AS INDICATED

CONSTRUCTION APPROACH SIGNING

PROJECT: HARDWICK-GREENSBORO	PROJECT NO.: STP 2112(1) S
DESIGN FILE NAME: pave/98bl06/pbl06.dgn	PLOT DATE: 10-JUL-2006 13
IPARM FILE NAME: pbl06cs.i	SURVEY DATE: 6/99
SURVEYED BY: CLD ENGINEERS, INC.	DRAWN BY: JPC
SQUAD LEADER: WRH	SHEET: 43 OF 43

DATUM	
VERTICAL	N/A
HORIZONTAL	N/A