

CONSTRUCTION APPROACH SIGNING


NOT TO SCALE

SEE STD E-100M FOR SIGN PLACEMENT

NOTE: WHEN DIRECTED BY THE RESIDENT ENGINEER, "NO OUTLET" SIDE ROADS WILL NOT REQUIRE CONSTRUCTION SIGNING

LEGEND

- RWA = ROAD WORK AHEAD
- RW500 = ROAD WORK 500 FT
- RWN = ROAD WORK NEXT 7 MILES
- ERW = END ROAD WORK

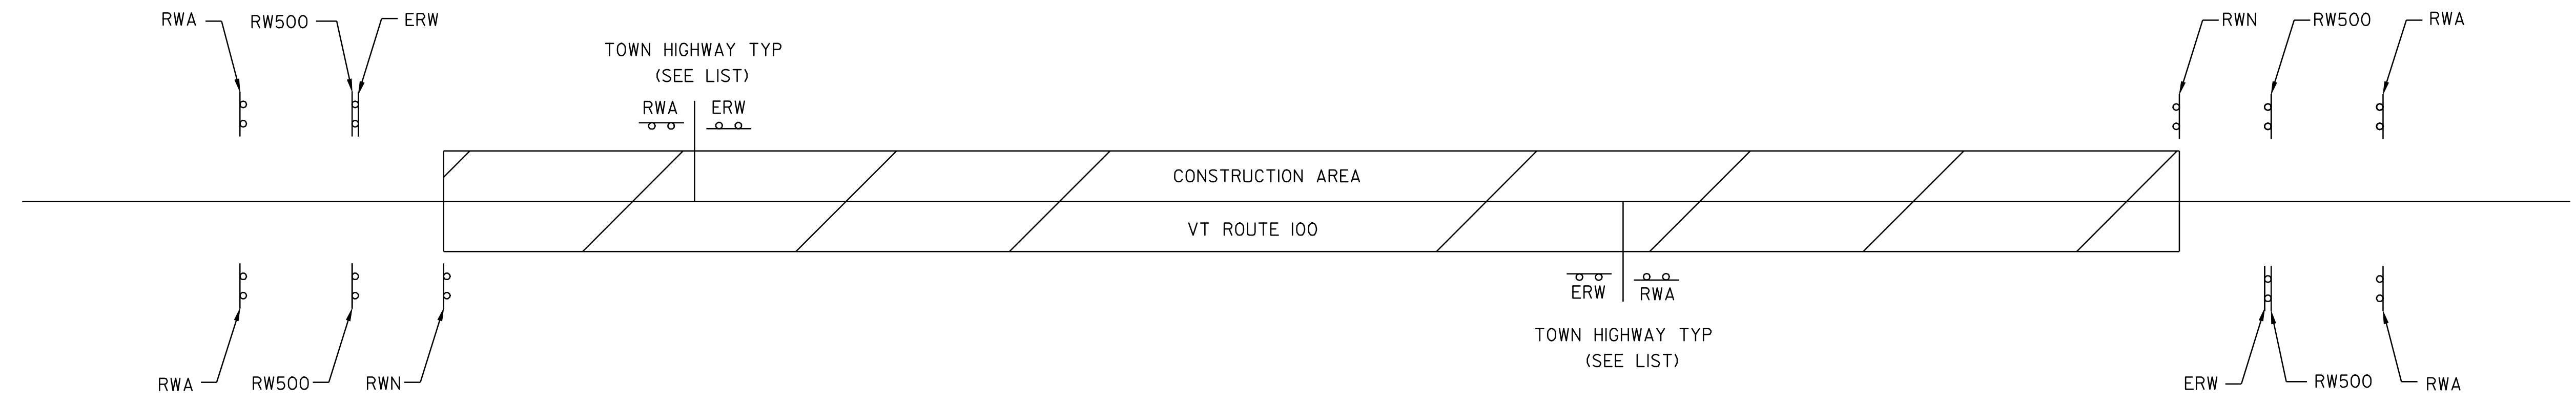

LIST OF TOWN/STATE HIGHWAYS FOR CONSTRUCTION SIGNS

TOWN/STATE HIGHWAY NAME	ROAD WORK AHEAD	END ROAD WORK	ROAD WORK 500 FT	ROAD WORK NEXT 7 MILES	SIDE ROAD WORK AHEAD	SIDE ROAD WORK 500 FT	OTHER
DOVER							
TH #11	1	1					
TH #38	1	1					
SA #4	1	1					
TH #35	1	1					
TH #9	1	1					
TH #15	1	1					
TH #14	1	1					
TH #9	1	1					
TH #8	1	1					
TH #66	1	1					
TH #66	1	1					
SA #3	1	1					
TH #45	1	1					
TH #45	1	1					
SA #3	1	1					
SKIAREA RD.	1	1					
TH #53	1	1					
TH #50	1	1					
TH #13	1	1					
TH #8	1	1					
TH #33	1	1					
STRATTON							
TH #20	1	1					
BEGINNING OF PROJECT	2	1	2	1			
END OF PROJECT	2	1	2	1			
TOTALS	26	24	4	2			

NOTE: ALL DIMENSIONS IN METERS EXCEPT AS INDICATED

DATUM	
VERTICAL	N/A
HORIZONTAL	N/A

CONSTRUCTION APPROACH SIGNING	PROJECT: DOVER - STRATTON	PROJECT NO.: STP 2214(I)S
	DESIGN FILE NAME: /pave/99bl80/pbl80.dgn	
	IPARM FILE NAME: pbl80cs.1	PLOT DATE: 24-MAY-2007
	SURVEYED BY: CLD ENGINEERS INC	SURVEY DATE: 5/00
	SQUAD LEADER: WRH	DRAWN BY: MPS
		SHEET: 49 OF 49