


- LEGEND**
- RWA = ROAD WORK AHEAD
  - RW500 = ROAD WORK 500 FEET
  - ERW = END ROAD WORK
  - RWN = ROAD WORK NEXT 5 MILES
  - SRWA = SIDE ROAD WORK AHEAD
  - SRW500 = SIDE ROAD WORK 500 FEET

**CONSTRUCTION APPROACH SIGNING**


SEE STD. E-100M & E-100AM FOR SIGN PLACEMENT

RESIDENT ENGINEER, AT HIS OR HER DISCRETION, MAY ELIMINATE CONSTRUCTION APPROACH SIGNING AT DEAD END LOCATIONS

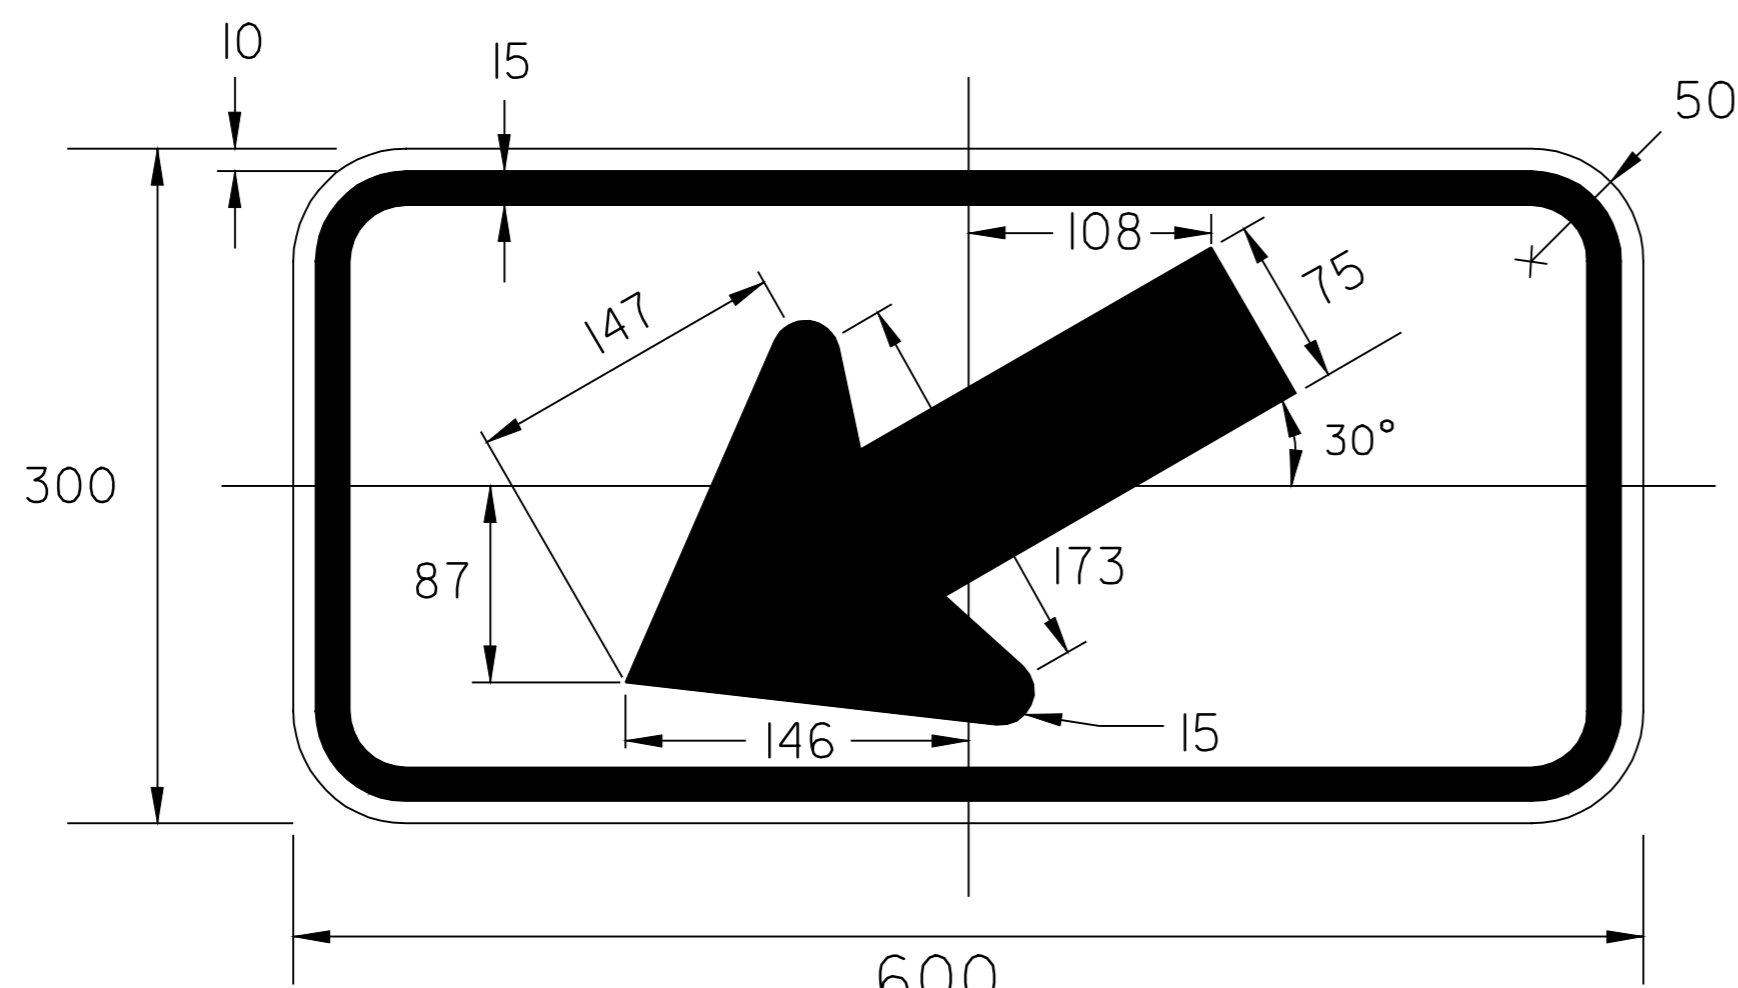

**W16-7P**

COLOR: FLOURESCENT YELLOW-GREEN SHEETING WITH BLACK BORDER AND ARROW  
MATERIAL: PER VOAT STANDARD E-I51M

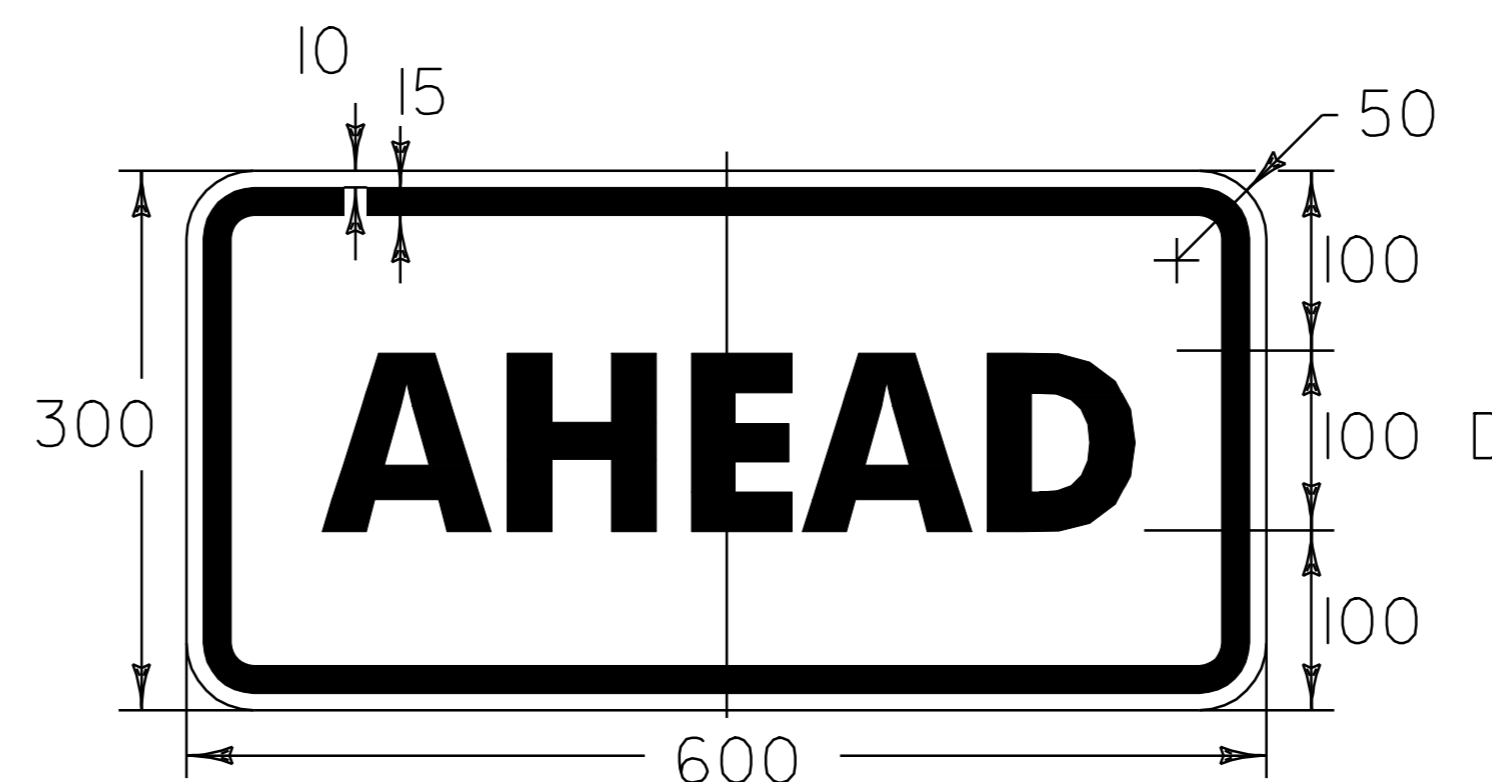

**W16-9p**

COLOR: FLOURESCENT YELLOW-GREEN SHEETING WITH BLACK BORDER AND TEXT  
MATERIAL: PER VOAT STANDARD E-I51M

DATUM	
VERTICAL	N/A
HORIZONTAL	N/A

**CONSTRUCTION APPROACH SIGNING SHEET**

SURVEYED BY	N/A	DATE	N/A
DRAWN BY	LOCKE	DATE	JAN 04
SQUAD LEADER	WOOLAVER		
DESIGN FILE NO.	/pave/99cl88/99cl88.dgn		
IPARM FILE		DATE PLOTTED	\$DATE\$
PROJ. NAME	CAMBRIDGE		
PROJ. NO.	STP 2218(1)S		
SHEET	28 OF 28		