


CONSTRUCTION APPROACH SIGNING

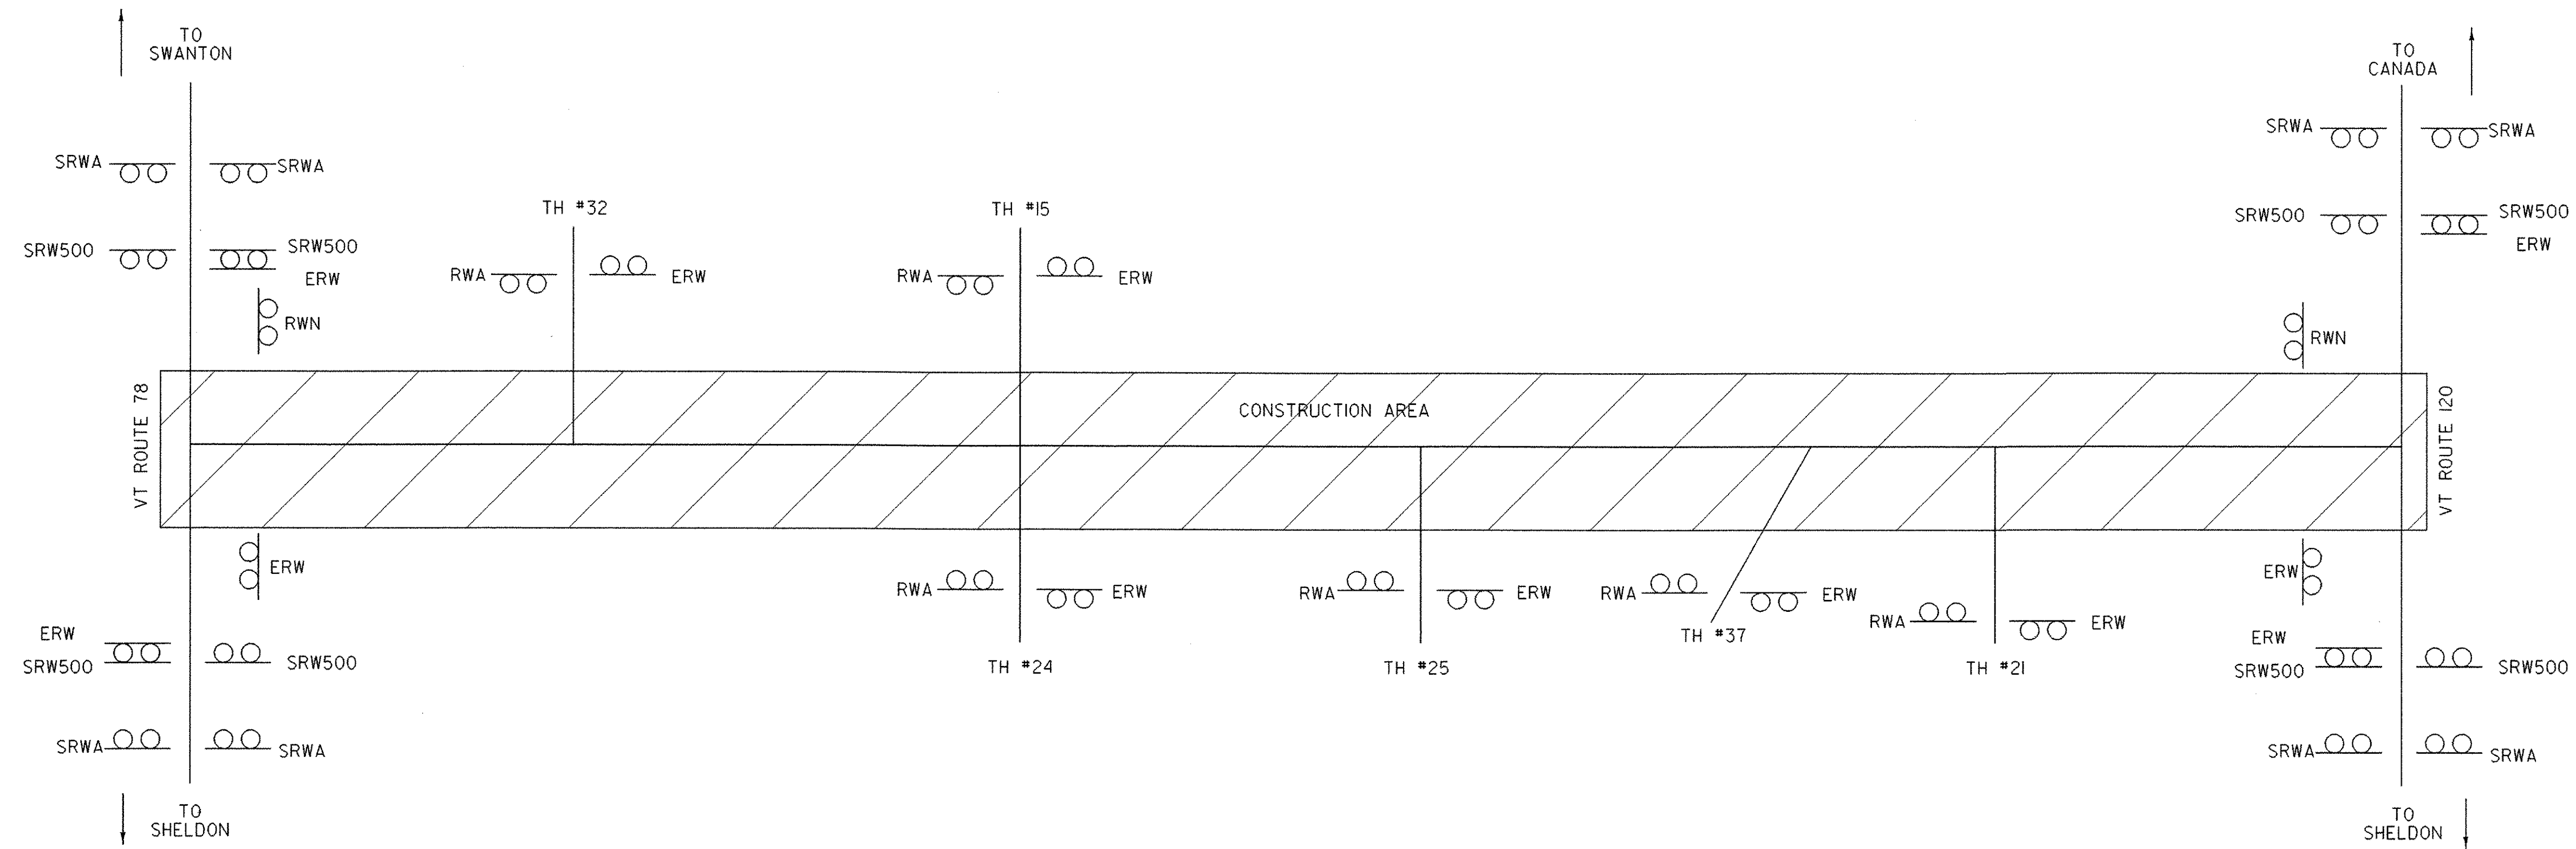

CONSTRUCTION APPROACH SIGNING
NOT TO SCALE
SEE STD E-100AM AND E-100M FOR SIGN PLACEMENT

LEGEND

- SRWA = SIDE ROAD WORK AHEAD
- SRW500 = SIDE ROAD WORK 500FT
- ERW = END ROAD WORK
- RWN = ROAD WORK NEXT 5 MILES
- RWA = ROAD WORK AHEAD

TOWN HIGHWAY NAME	SIDE ROAD WORK AHEAD	SIDE ROAD WORK 500FT	END ROAD WORK	ROAD WORK NEXT 5 MILES	ROAD WORK AHEAD
ROUTE 78	4	4	2		
BEGIN PROJECT			1	1	1
TH #32			1		1
TH #15			1		1
TH #24			1		1
TH #25			1		1
TH #37			1		1
TH #21			1		1
END PROJECT			1	1	1
ROUTE 120	4	4	2		
TOTAL	8	8	12	2	8

ALL DIMENSIONS IN mm UNLESS OTHERWISE NOTED.

PROJECT NAME: HIGHGATE - FRANKLIN	PLOT DATE: 09-MAY-2005
PROJECT NUMBER: STP RS 030(K) SA	DRAWN BY: SQUAD B
FILE NAME: ...85c060/design/dc060d1.dgn	CHECKED BY: SQUAD B
PROJECT LEADER: DELLASANTA	SHEET 272 OF 450
DESIGNED BY: SQUAD B	
IPARM FILE NAME: dc060cas.i	