
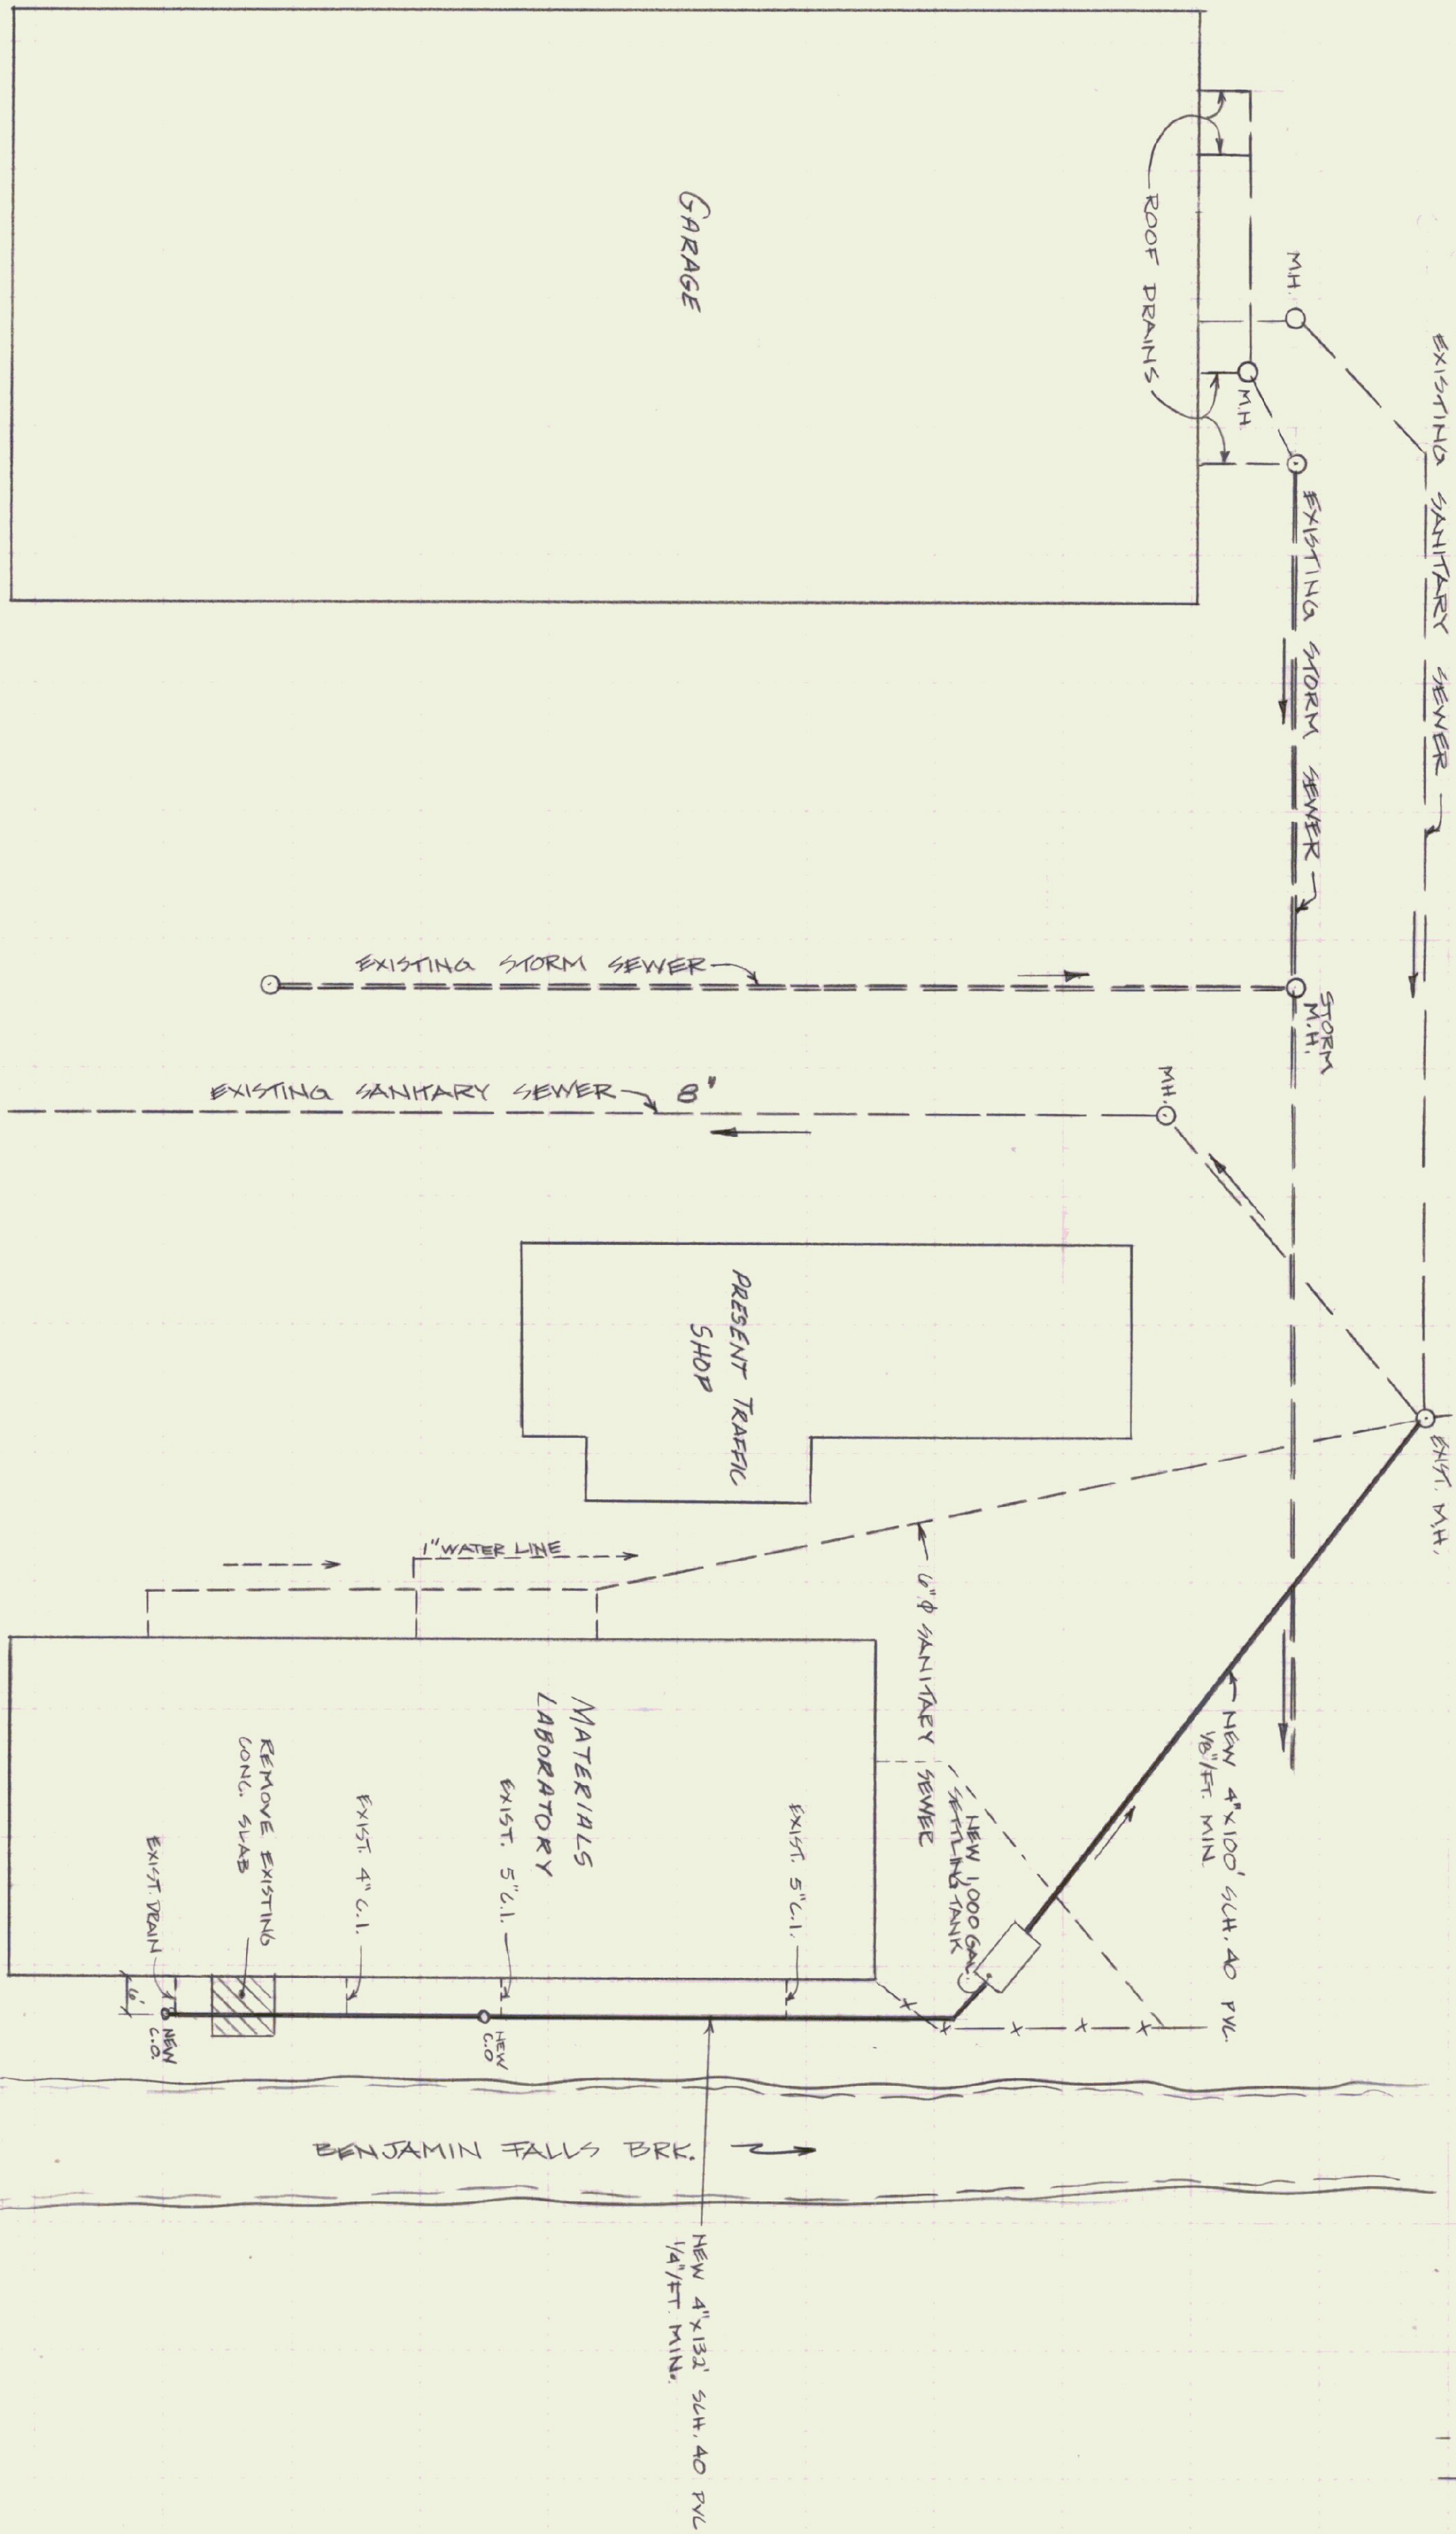
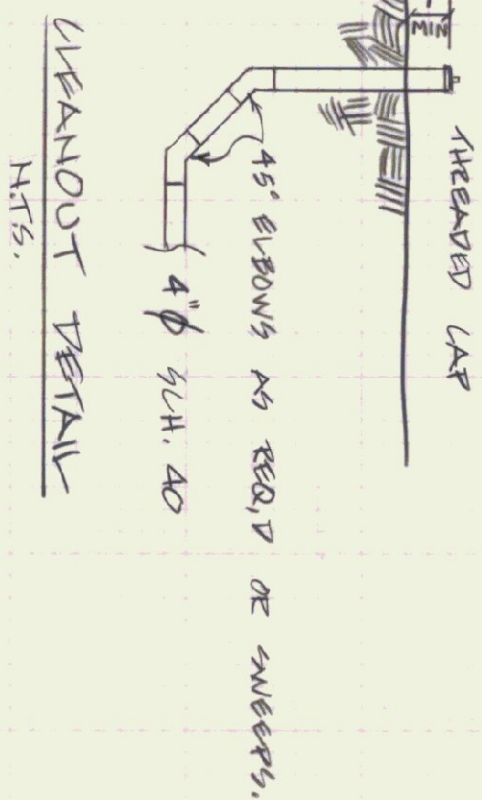


NOTES:

1) FIELD VERIFY ALL SEWERS BEFORE COMMENCING CONSTRUCTION TO AVOID PROPER FLOW.

ALL WASTE LINES BEING CONNECTED TO NEW LINE ORIGINATE FROM SINKS USED TO WASH SOIL SAMPLES. WET TANK IS EMPLOYED ONLY AS A GERT CHAMBER TO INTERCEPT MATERIAL BEFORE IT ENTERS MUNICIPAL SEWER.

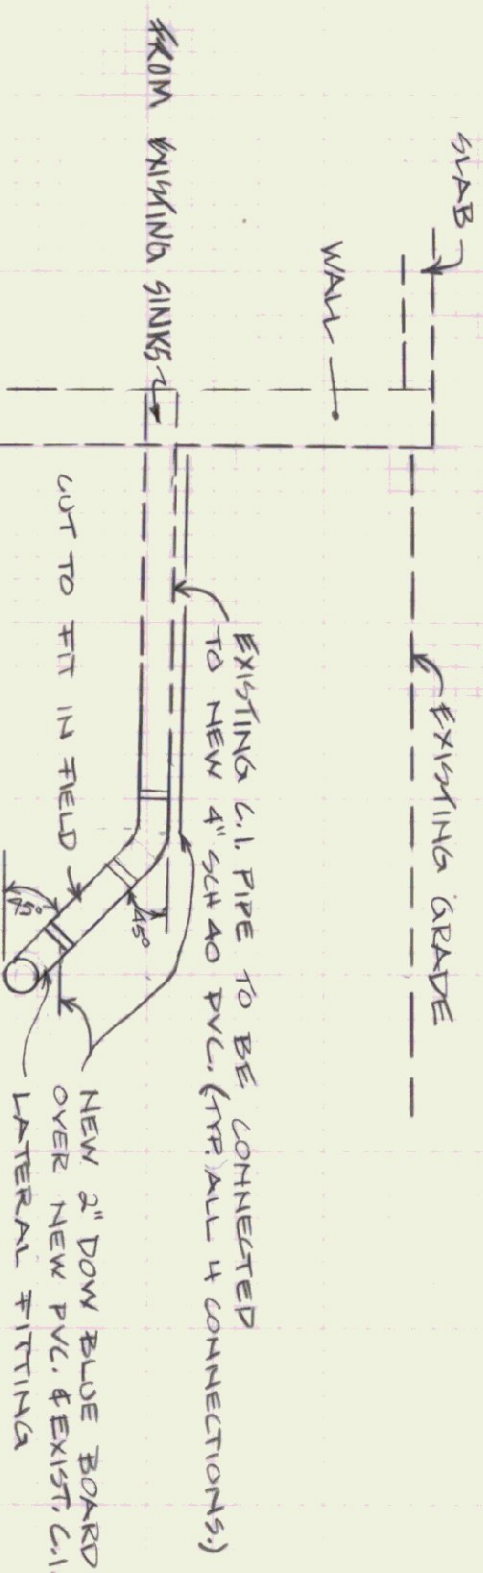

STATE OF VERMONT
DEPARTMENT OF STATE BUILDINGS
AGENCY OF ADMINISTRATION
MONTPELIER

MATERIALS LABORATORY
DISCHARGE PLAN

BERLIN		VERMONT	
DATE: 5-8-80	SCALE: 1"=20'	REVISIONS: 5-1	DWG. NO. 5-1
DRAWN BY: R. MONTPELIER	APPROVED BY: F. R. BATT	1 OF 1	