



10 WOMEN'S BATHROOM
3/8" = 1' - 0"

9 WOMEN'S BATHROOM
3/8" = 1' - 0"

8 WOMEN'S BATHROOM
3/8" = 1' - 0"

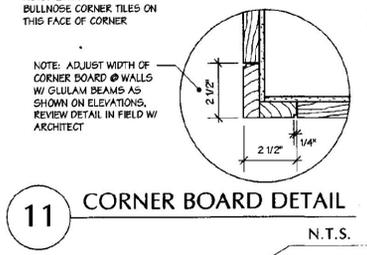


11 CORNER BOARD DETAIL
N.T.S.

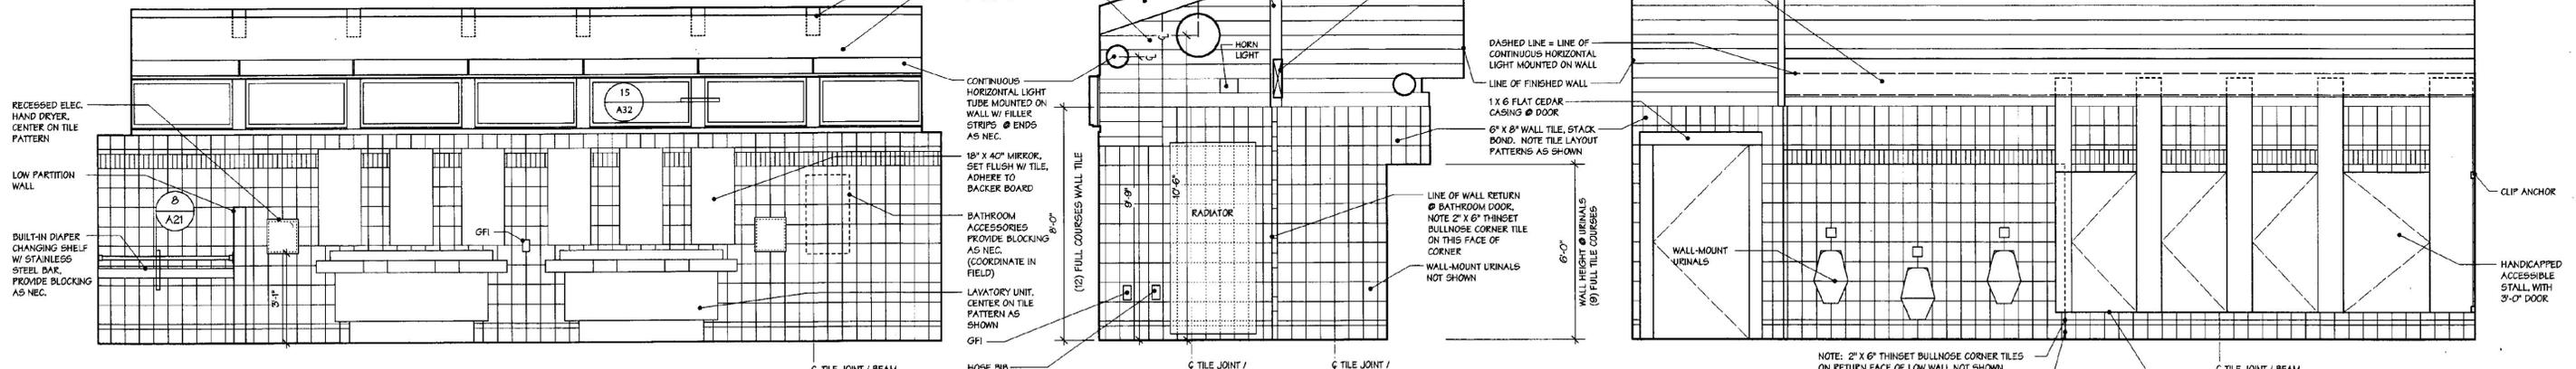


7 MEN'S BATHROOM
3/8" = 1' - 0"

6 MEN'S BATHROOM
3/8" = 1' - 0"


5 MEN'S BATHROOM
3/8" = 1' - 0"

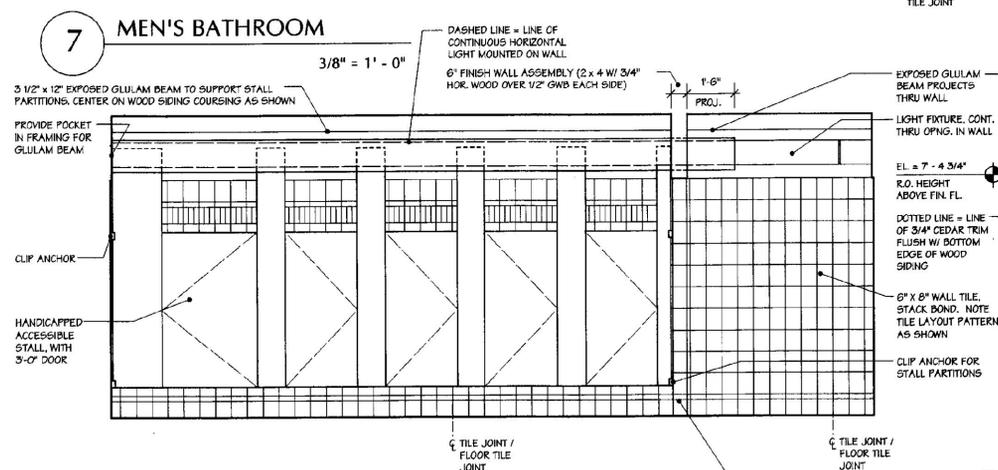


4 FLEX BATHROOM
3/8" = 1' - 0"

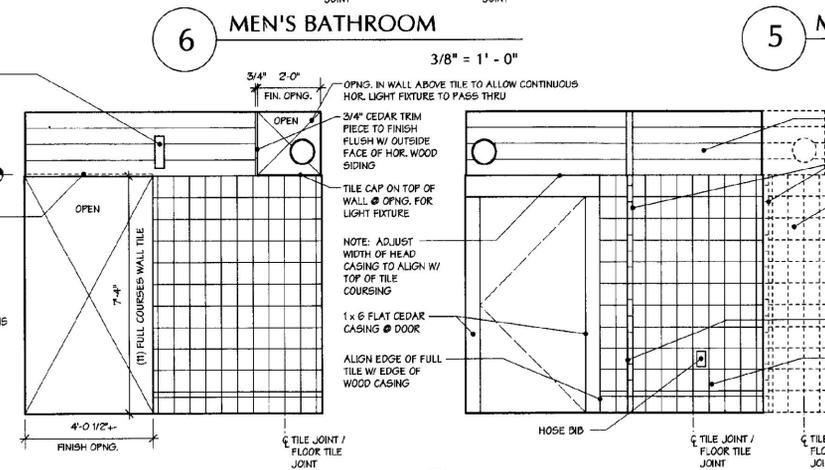

3 FLEX BATHROOM
3/8" = 1' - 0"

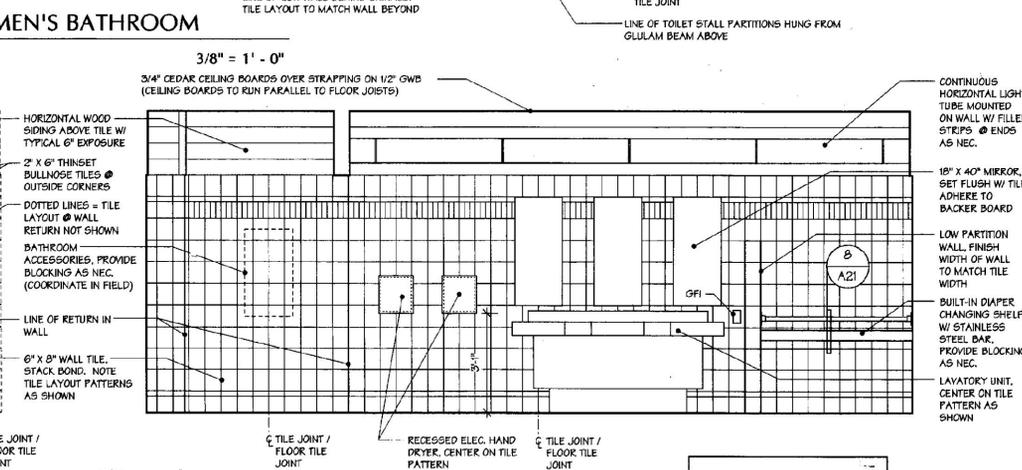

2 FLEX BATHROOM
3/8" = 1' - 0"

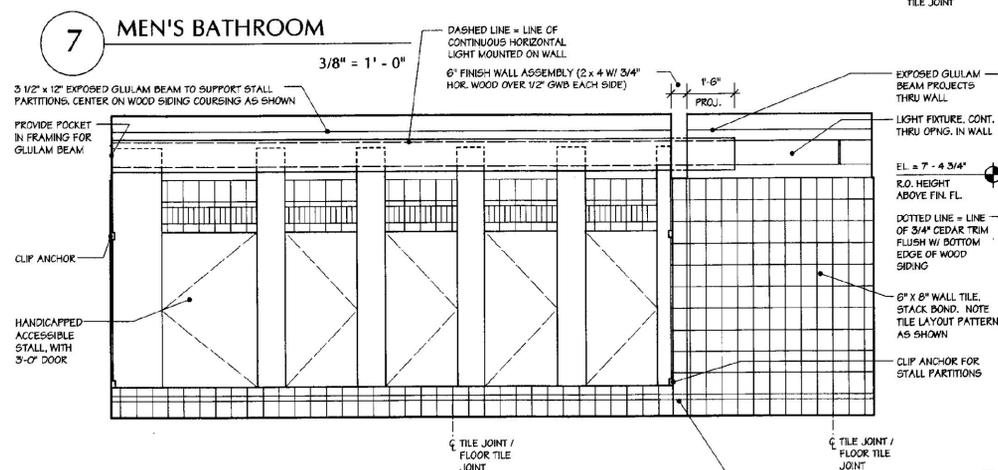

1 FLEX BATHROOM
3/8" = 1' - 0"



JANUARY 16, 2001