CODE	TIME	BY

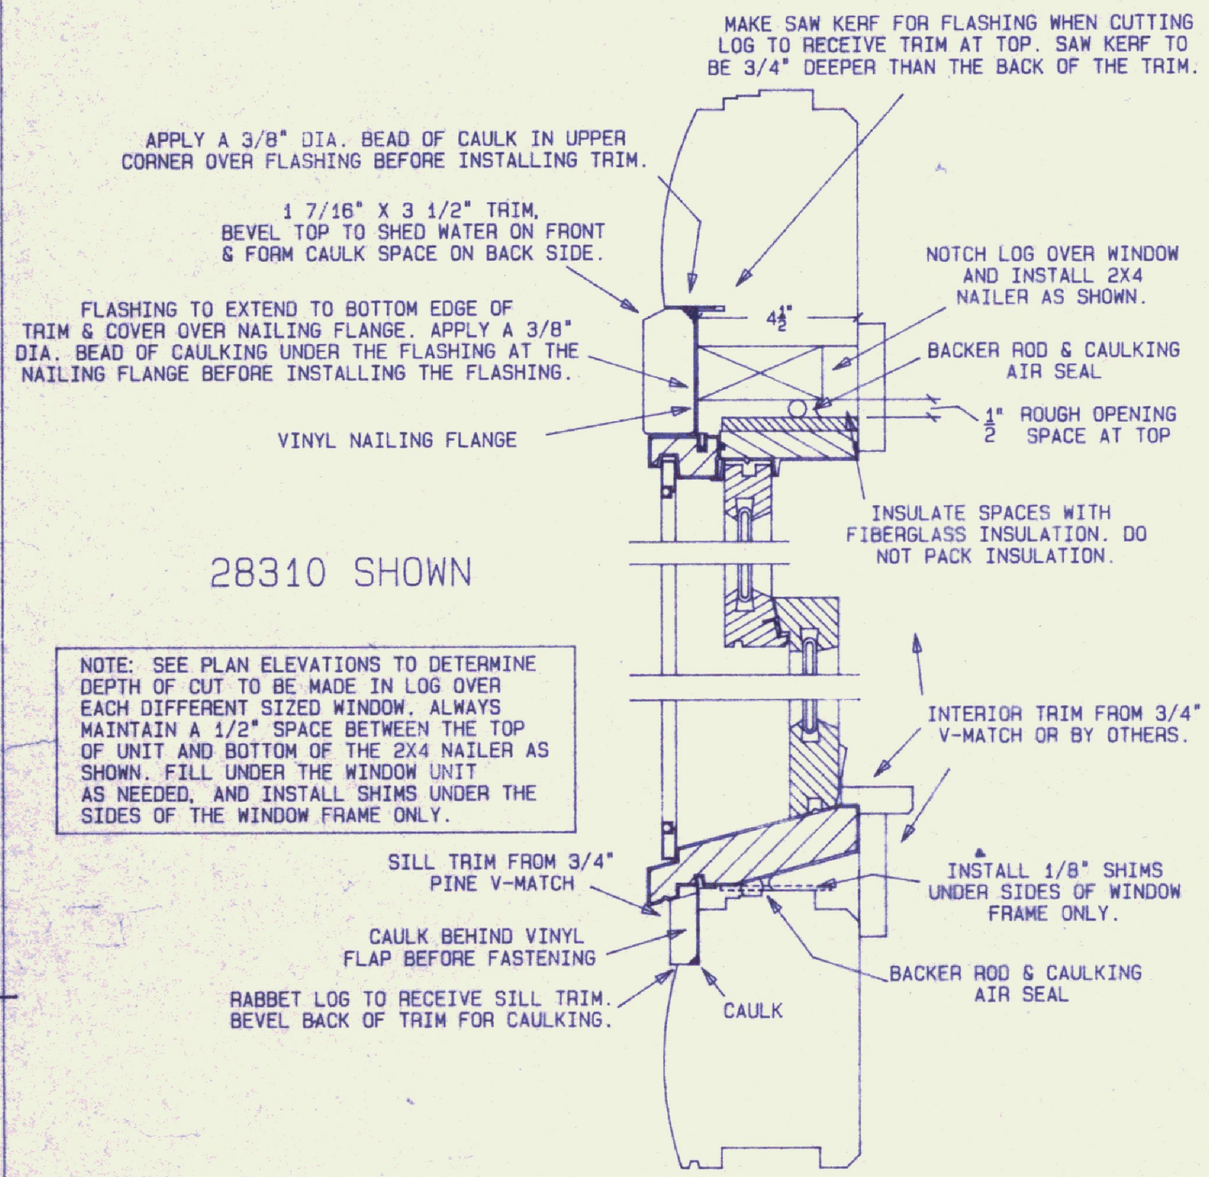

ANDERSEN® DOUBLE HUNG HEAD & SILL DETAIL (1/D)

SCALE: 3"=1'-0"

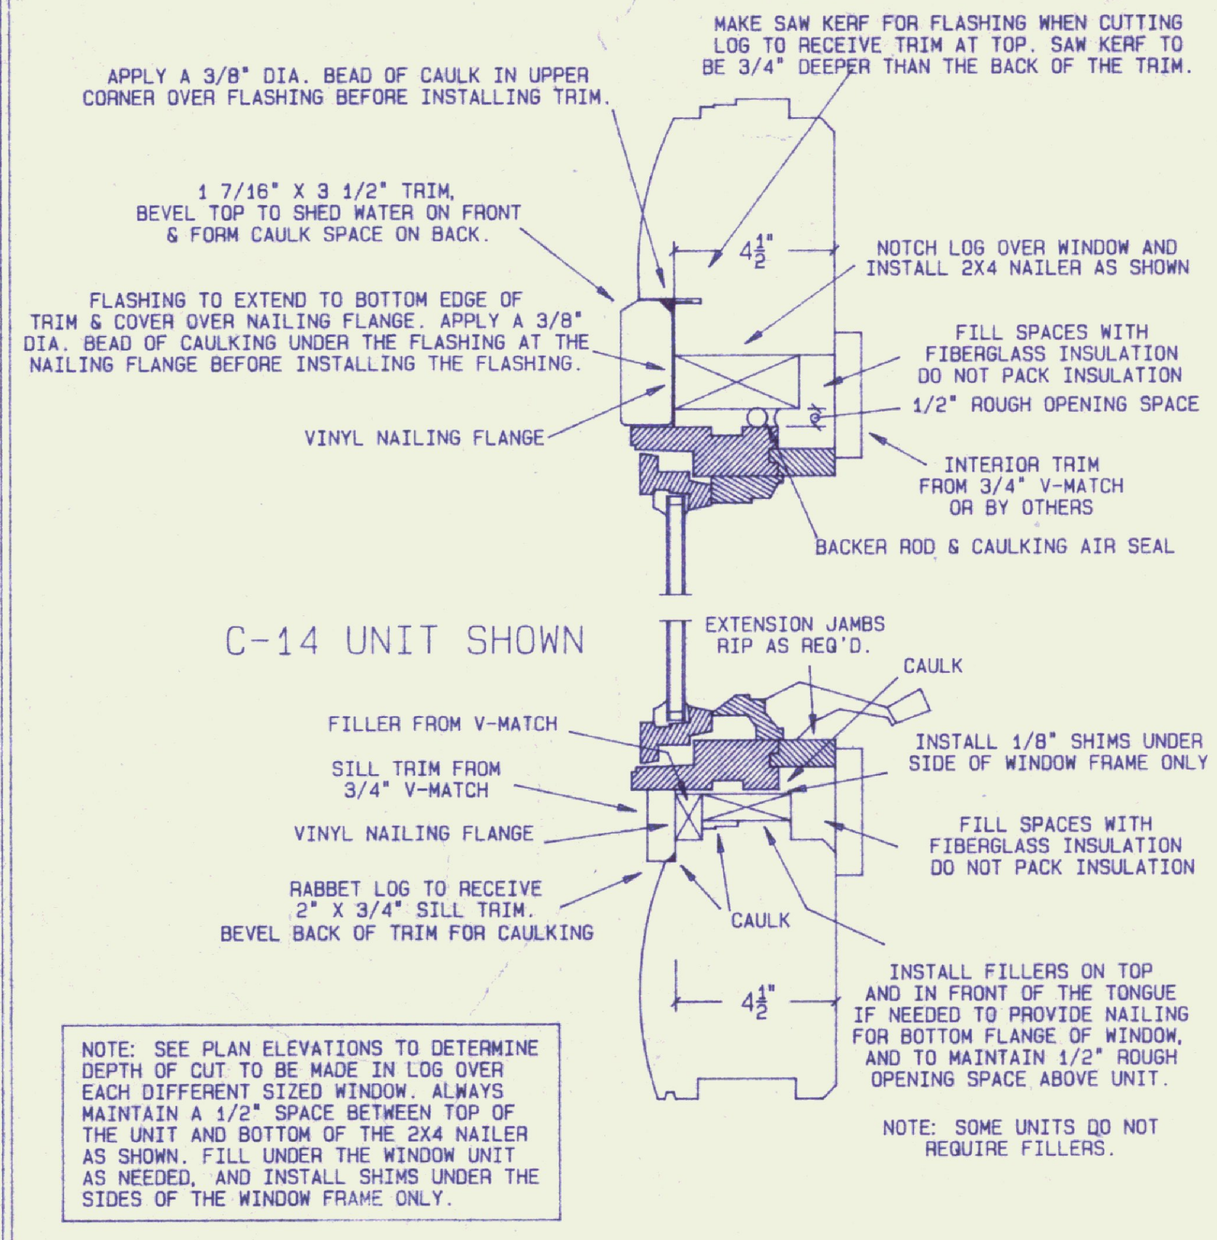

ANDERSEN® CASEMENT HEAD & SILL DETAIL (2/D)

SCALE: 3"=1'-0"

GENERAL NOTES:

FLASHING IS RECOMMENDED AT THE TOP TRIM OF ALL WINDOWS. FLASHING BY OTHERS.

DO NOT LET WEIGHT OF LOGS BEAR ON WINDOW OR DOOR UNIT.

CAUTION:

NORTHEASTERN RECOMMENDS SEALING WITH BACKER ROD & CAULKING AS SHOWN HOWEVER, IF SPRAY FOAM INSULATION IS USED TO SEAL AT DOORS OR WINDOWS, READ MANUFACTURER'S INSTRUCTIONS CAREFULLY FOR PROPER INSTALLATION PROCEDURES. APPLY ONLY A SMALL BEAD OF SPRAY FOAM AND DO NOT ATTEMPT TO FILL THE ENTIRE SPACE. SPRAY FOAM EXPANDS GREATLY AND COULD CAUSE ABNORMAL PRESSURE ON JAMBS RESTRICTING OPERATION OF MOVING PARTS. SPRAY FOAM INSULATION BY OTHERS.

AT ROUGH OPENINGS, INSTALL BACKER ROD & CAULKING SEAL. FILL ALL REMAINING SPACES WITH FIBERGLASS INSULATION BEFORE INSTALLING TRIM.

SEE "CONSTRUCTION GUIDE" FOR ADDITIONAL INFORMATION ON INSTALLATION OF WINDOWS.

DETAILS ON THIS SHEET ARE GENERAL AND MAY NOT APPLY TO ALL BUILDINGS.

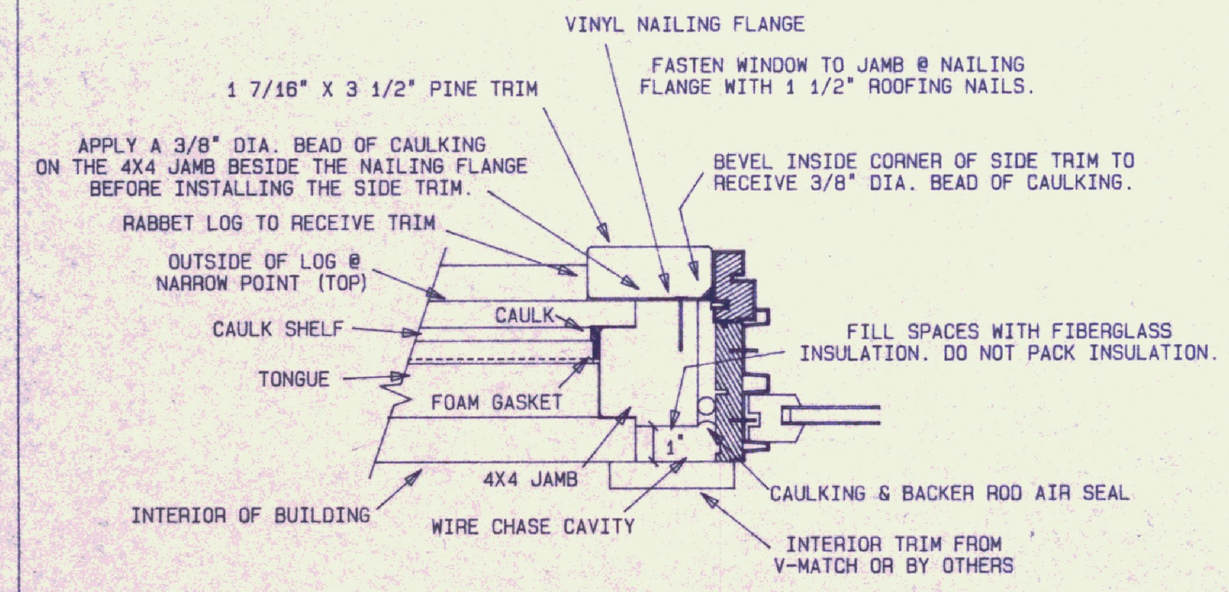

ANDERSEN® D/H WINDOW JAMB DETAIL (3/D)

SEE ALSO DETAIL 1/A-4

SCALE: 3"= 1'-0"

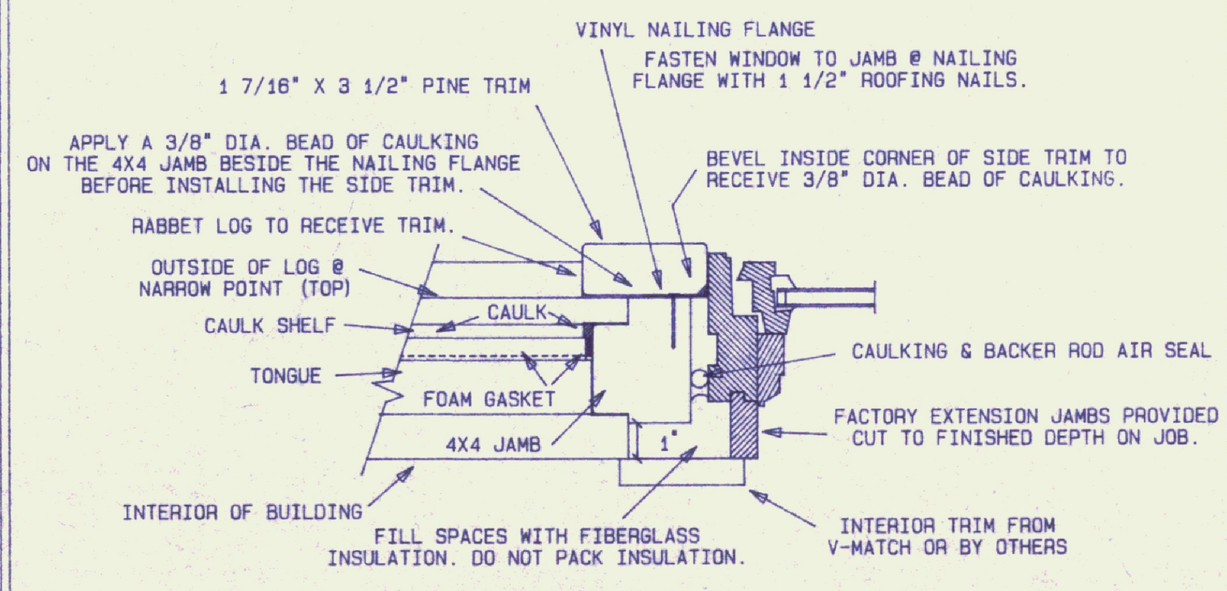

ANDERSEN® CASEMENT WINDOW JAMB DETAIL (4/D)

SEE ALSO DETAIL 1/A-4

SCALE: 3"= 1'-0"

Northeastern Log Homes

© 1993 by NLH Inc.

NO.	REVISION	DATE	BY	CKD

WINDOWS	MODEL: STANDARD DETAILS D-96
DRN MG	CODES: WINDOW INSTALLATION
CKD SDP	
PROJECT NAME: IN LOG WALLS	
DATE JAN. 1, 1995	PLAN NO NE
SCALE AS NOTED	SHT NO D

Opti Printing, Inc. 78419 Form 10878